



A4173-KIT and A4176-KIT Installation Instructions

For locking Lever Replacement on 4" and 5" Storz Couplings



1) Place the spring into the pocket of the locking lever. The short leg of the spring should be on the top and to the inside of the pocket.

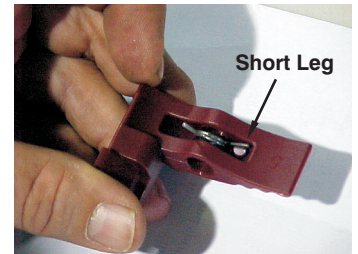




2) Align the flat on the peg with the flat inside of the locking lever hole. Slide locking lever and spring onto tool. There are two small pins and one large pin on the tool. When the tool is properly placed on the locking lever the two small pins will be on opposite sides of the lever part of the locking lever

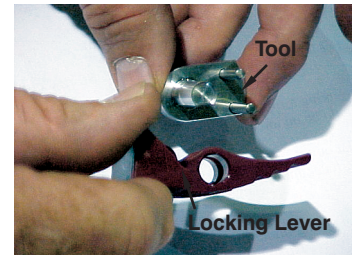

3) Place long leg of spring under pin on the tool and push tool completely onto the locking lever. This will preload the spring. The locking lever is now ready for installation on the coupling.

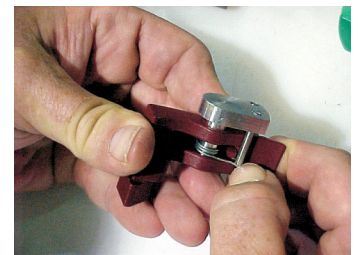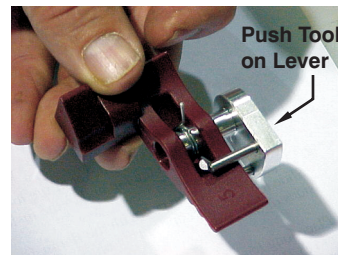

4) Position tool and lock lever on the top of the post. Push lever onto post until it stops. Pull the tool out of the lock lever, holding the lever and spring on the coupling. Push lock lever the remainder of the way onto the post.

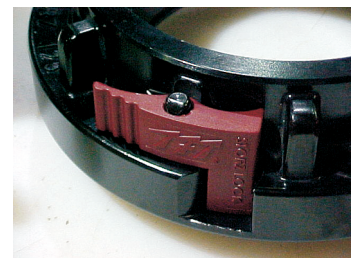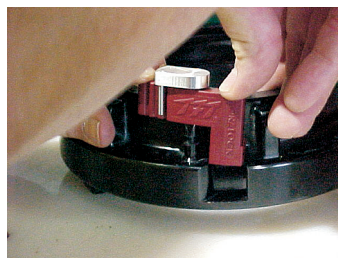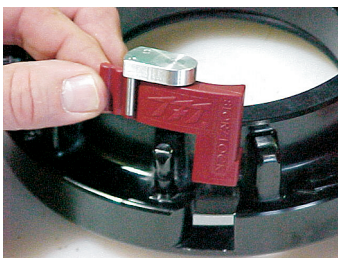

For technical assistance please do not hesitate to contact a member of our
 Customer Service Department at 800-348-2686.