




MANUAL: HURRICANE FIXED & HURRICANE RC MONITOR

See Remote Control (RC) Monitor Electrical Controls Supplemental Instructions For Use With Hurricane RC Models


INSTRUCTIONS FOR INSTALLATION, SAFE OPERATION AND MAINTENANCE

⚠ DANGER


Read instruction manual before use. Operation of this device without understanding the manual and receiving proper training is a misuse of this equipment. A person who has not read and understood all operating and safety instructions is not qualified to operate the Hurricane or Hurricane RC Monitor.

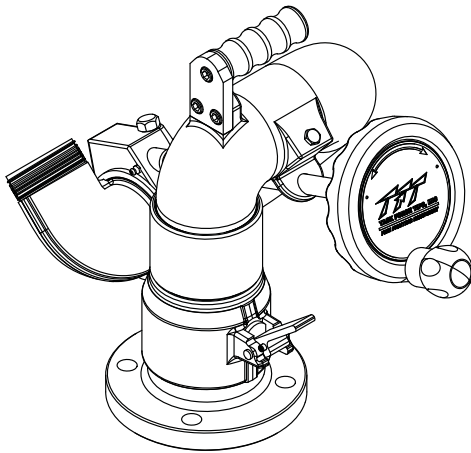

Hurricane Fixed Extended

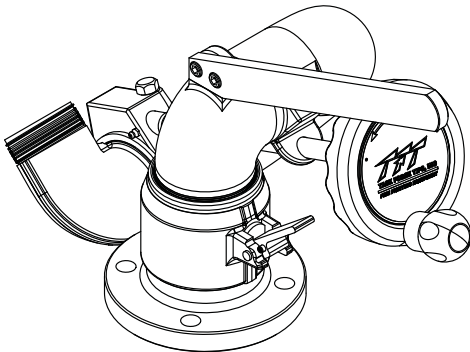

Hurricane Fixed

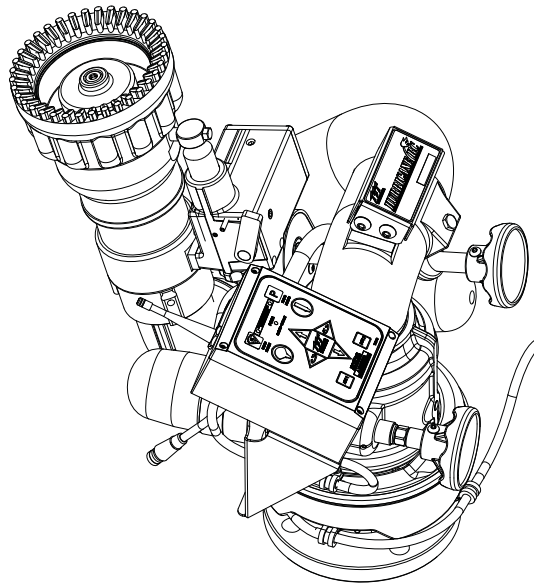

HURRICANE RC

Maximum Recommended Flow
is 1250 gpm (5000 l/min)
Maximum Recommended Pressure
is 250 psi (17 bar)

HURRICANE

TASK FORCE TIPS, INC.
MADE IN USA • www.tft.com

2800 East Evans Avenue, Valparaiso, IN 46383-6940 USA
800-348-2686 • 219-462-6161 • Fax 219-464-7155



PERSONAL RESPONSIBILITY CODE

The member companies of FEMSA that provide emergency response equipment and services want responders to know and understand the following:

1. Firefighting and Emergency Response are inherently dangerous activities requiring proper training in their hazards and the use of extreme caution at all times.
2. It is your responsibility to read and understand any user's instructions, including purpose and limitations, provided with any piece of equipment you may be called upon to use.
3. It is your responsibility to know that you have been properly trained in Firefighting and /or Emergency Response and in the use, precautions, and care of any equipment you may be called upon to use.
4. It is your responsibility to be in proper physical condition and to maintain the personal skill level required to operate any equipment you may be called upon to use.
5. It is your responsibility to know that your equipment is in operable condition and has been maintained in accordance with the manufacturer's instructions.
6. Failure to follow these guidelines may result in death, burns or other severe injury.







Fire and Emergency Manufacturers and Service Association
P.O. Box 147, Lynnfield, MA 01940 • www.FEMSA.org

Table Of Contents

| | | | |
|--|-------|--|------------|
| 1.0 Meaning of Safety Signal Words..... | 3 | 6.0 Flows and Pressures..... | 16-19 |
| 2.0 Safety | 3 | 6.1 Stacked Tips Flow and Reach | |
| 3.0 General Information | 4-10 | 6.2 Automatic Masterstream Nozzles | |
| 3.1 Mechanical Specifications | | 6.3 Stream Straighteners | |
| 3.2 Part Identification and Models | | 6.3.1 Stream Straighteners with Stacked Tips | |
| 3.3 Inlets and Outlets | | 6.3.2 Stream Straighteners with Fog Nozzles | |
| 3.4 Overall Dimensions | | 7.0 Maintenance and Inspection..... | 20 |
| 4.0 Installation | 10-15 | 7.1 Lubrication | |
| 4.1 Structural Requirements for Monitor Mounting | | 7.2 Performance Testing | |
| 4.2 Inlet Mounting and Travel Ranges | | 8.0 Troubleshooting | 20 |
| 4.3 Nozzle Installation | | 9.0 Drawings and Parts List | 21-27 |
| 4.4 Pressure Gage Port | | 9.1 Hurricane XFI and XFIB Series | |
| 4.5 Drain | | 9.2 Hurricane XFIBE Extended Series | |
| 5.0 Operation | 15 | 9.3 Hurricane RC | |
| 5.1 Horizontal Rotation Control | | 9.4 Elevation Chain Drive Assembly | |
| 5.2 Elevation Control | | 9.5 Gear Motor Assembly | |
| 5.3 Recommended Park Position | | 9.6 Monitor Control Box Assembly | |
| 5.4 Override Knobs | | 10.0 Warranty | Back Cover |








1.0 MEANING OF SAFETY SIGNAL WORDS

A safety related message is identified by a safety alert symbol and a signal word to indicate the level of risk involved with a particular hazard. Per ANSI standard Z535.6-2006, the definitions of the four signal words are as follows:

| | |
|---|---|
|  | DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. |
|  | WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. |
|  | CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. |
|  | NOTICE is used to address practices not related to personal injury. |

2.0 SAFETY

The operation of this monitor can be dangerous. The following must be observed at all times.

| | |
|---|---|
|  | WARNING Injury or death may occur by attempting to use a damaged monitor. Before using the monitor inspect it for damage resulting from: <ul style="list-style-type: none">• Failure to drain monitor followed by exposure to freezing conditions• Exposure of monitor to temperatures in excess of 160 degrees F• Structural damage caused by over-pressurization• Missing parts, physical abuse, exposure to severe chemicals• Deformed or cracked flanges damaged as a result of improper installation<ul style="list-style-type: none">- Excessive bolt torque- Wrong tightening sequence |
|  | WARNING Injury can result from an inadequately supported monitor. The monitor mount must be capable of supporting 1050 lbs (480 kg) of nozzle reaction force. |
|  | WARNING The stream exiting a monitor is very powerful and capable of causing injury and property damage. Make sure the monitor is securely attached to the base and pointing in a safe direction before water to the monitor is turned on. Use care in directing the stream. |
|  | CAUTION The electric Hurricane RC may be remotely operated. The electric drives are current limited but may still produce enough force to cause injury. Keep hands and fingers away from pinch points on the monitor. |
|  | CAUTION Do not use the manual override knobs while the electric controls are in operation. The electric drives produce enough torque to cause injury. |
|  | CAUTION Maximum flow and pressure is 1250 gpm (5000 l/min) and 250 psi (17 bar). Damage or injury may result if the monitor is operated beyond these limits. |
|  | CAUTION On many vehicle installations, the monitor is the highest point on the apparatus. Be sure there is sufficient clearance to safely pass under any doors or overhead obstructions. Always check parked position of the monitor before moving. |

3.0 GENERAL INFORMATION

The Task Force Tips HURRICANE Industrial Monitor based on our innovative and successful CROSSFIRE monitor is a very simple, yet effective, fixed location master stream device. It is made of ANSI A356.0-T6 aluminum that has been hardcoat anodized and then powder coated inside and out creating excellent corrosion resistance in the harshest environments.

The Task Force Tips' HURRICANE RC is an electric remote monitor, with a single low-profile waterway discharge. It has high flow and low friction loss characteristics. Capable of flowing 1250 gpm (5000 l/min) while maintaining a FULL 450° of rotational travel (225° either side of center position). Maximum operating pressure is 250 psi (17 bar). Field changeable horizontal rotation stops at 45°, 90° and 135° either side of center position. Elevation range is 90° above horizontal and 45° below. Designed for auto sense 12 or 24 VDC operation. The Hurricane RC comes with a factory installed control panel mounted on the monitor for controlling horizontal rotation, elevation and nozzle pattern. See Task Force Tips Price List and Product Specifications for additional control stations. Unit comes with 30 feet of ultra-flexing robotic cable, enclosed in a unique wire guide, already wired to the monitor so installation effort is minimized. Knobs are provided on the horizontal rotation and elevation drive for manual override. TFT's Master Stream 1250 nozzle plugs into the factory installed nozzle power wire. All electrical components affecting water tightness are a minimum of NEMA 4 (IP65). Motors and control boxes are factory tested for water tightness. Available with various inlet adapters for flanges and thread fittings. Inlet also made for direct connection to TFT's Extend-A-Gun RC3 or RC4. Standard outlet is 2-1/2" National Hose male (65mm). Other outlets are available (see figure 3.3). A threaded port (0.25" NPT) (6.4mm) is provided for pressure gauge. The monitor is made from hardcoat anodized ANSI 356.0-T6 aluminum and silver powder coat finish inside and out.

3.1 MECHANICAL SPECIFICATIONS

| | HURRICANE FIXED MONITOR | | | HURRICANE RC |
|----------------|---|---|---|---|
| Model | XFI-FLNJ | XFI-FPNJ | XFI-PLNJ | XFIH-E*** |
| Inlet | 3" ANSI 150 | 4" ANSI 150 | 3" NPT | See Fig 3.3 |
| Outlet | 2 1/2" NH | 2 1/2" NH | 2 1/2" NH | See Fig 3.3 |
| Weight | 19.6 lbs 8.9 kg | 22.2 lbs 10 kg | 18.2 lbs 8.2 kg | 39 lbs (17.7 kg) |
| Min. Flow Area | 8.3in ² (53.5 cm ²) | 8.3in ² (53.5 cm ²) | 8.3in ² (53.5 cm ²) | 7.07 in ² (45.6 cm ²) |
| Max Flow | 1250 gpm (5000 L/Mn) | 1250 gpm (5000 L/Mn) | 1250 gpm (5000 L/Mn) | 1250 gpm (5000 L/Mn) |
| Max Pressure | 250 psi (17 bar) | 250 psi (17 bar) | 250 psi (17 bar) | 250 psi (17 bar) |
| Materials Used | ANSI A356.0-T6, Stainless, Nylon | ANSI A356.0-T6, Stainless, Nylon | ANSI A356.0-T6, Stainless, Nylon | ANSI A356.0-T6, Stainless, Nylon |

Fig 3.1A
Specifications

TFT HURRICANE FIXED MONITOR FRICTION LOSS

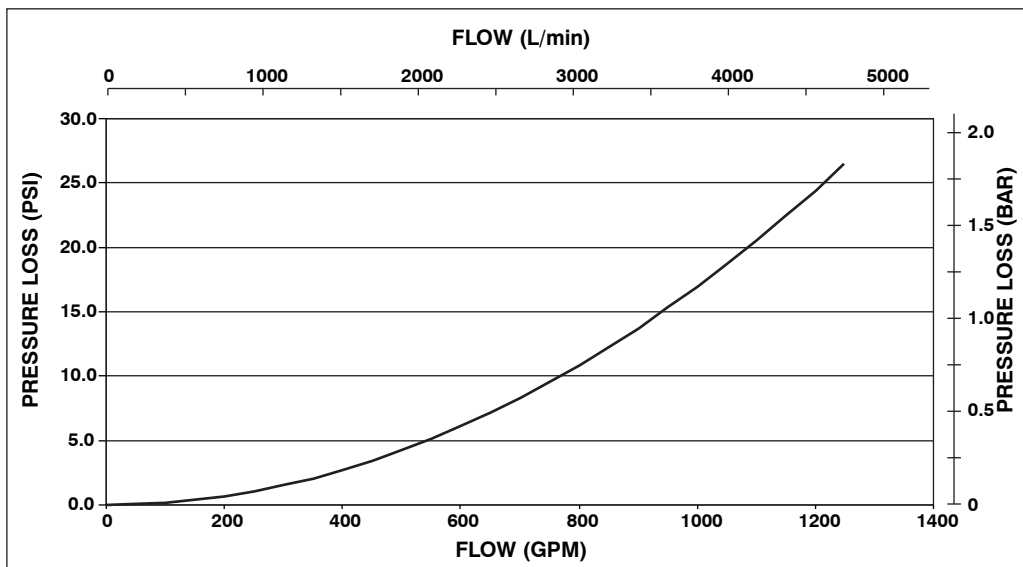


Fig 3.1B
Friction Loss

3.2 PART IDENTIFICATION AND MODELS

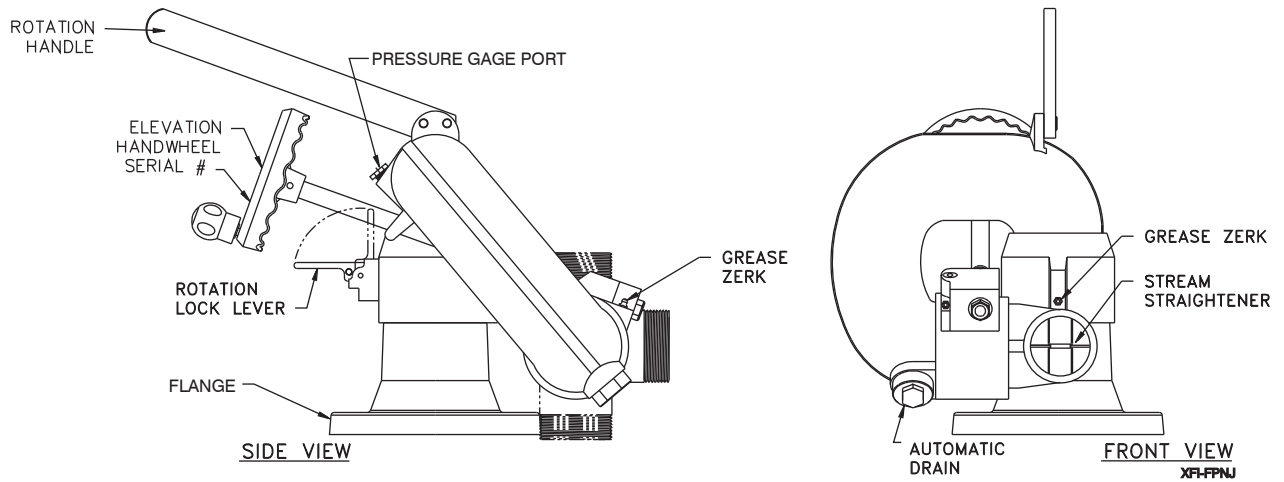


Fig. 3.2A
Hurricane Fixed Monitor

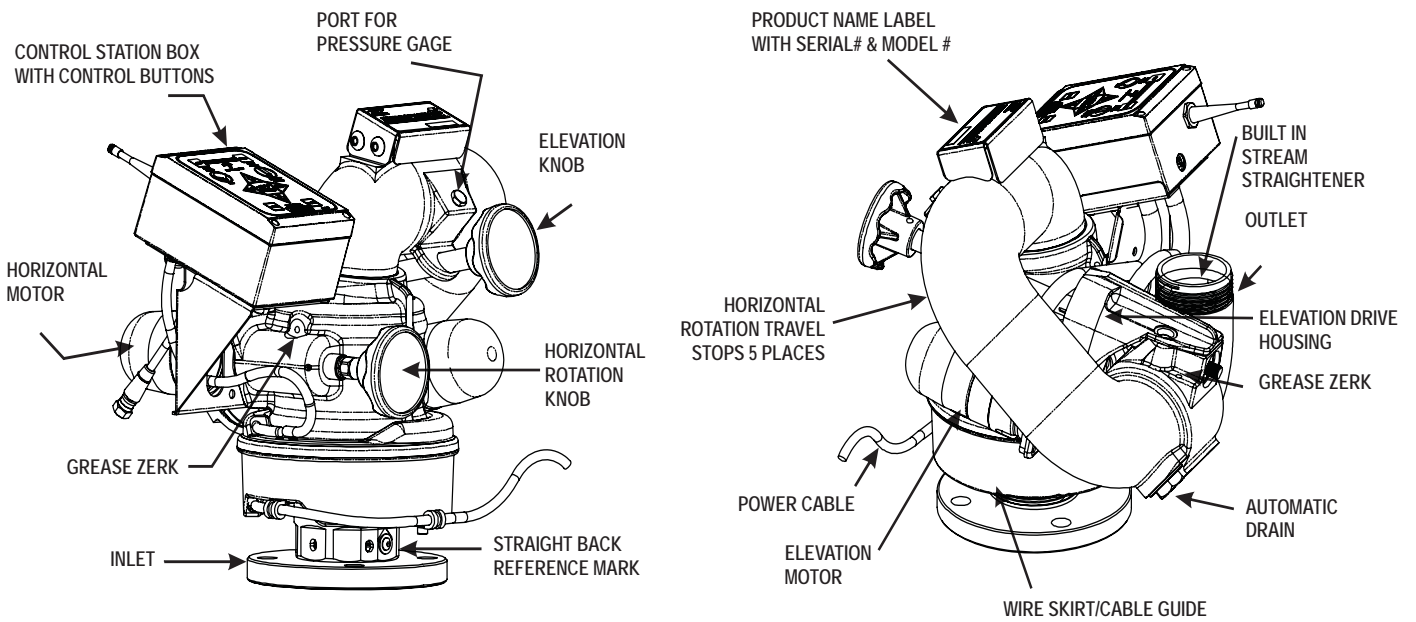


Fig. 3.2B
Hurricane RC Monitor

3.3 INLETS AND OUTLETS

| MODEL | FITS FLANGE | OUTSIDE DIAMETER | THICKNESS | BOLT HOLE CIRCLES | NO. BOLT HOLES | SIZE OF BOLTS | TORQUE ON BOLTS |
|-----------|--------------------------------------|------------------|--------------|-------------------|----------------|---------------|---------------------------------------|
| XFI-FL* | 3" ANSI 150 (metric PN20) | 7.5" 190mm | .75" 20mm | 6.0" 152.5mm | 4 4 | 5/8" M16 | 76-80 FT-LBF 100-110 Newton Meters |
| XFI-FP* | 4" ANSI 150 (metric PN20) | 9.0" 230mm | .94" 23mm | 7.5" 190.2mm | 8 8 | 5/8" M16 | 76-80 FT-LBF 100-110 Newton Meters |
| XFIH-E1*A | 3" ANSI 125/150 (metric DN8 PN20) | 7.5" 190mm | .75" 20mm | 6.0" 152.5mm | 4 4 | 5/8" M16 | 76-80 FT-LBF 100-110 Newton Meters |
| XFIH-E2*A | 4" ANSI 150 (metric DN100 PN20) | 9.0" 230mm | .94" 23mm | 7.5" 190.2mm | 8 8 | 5/8" M16 | 76-80 FT-LBF 100-110 Newton Meters |
| XFIH-E4*A | metric DN80, PN16 | 200 mm | 22 mm | 160 mm | 8 | 16 mm | 100-110 Newton Meters |
| XFIH-E5*A | metric DN100, PN16 | 220mm | 22 mm | 180 mm | 8 | 16 mm | 100-110 Newton Meters |

* These digits in the model number refer to exit thread size and type.

Fig 3.3A
Inlet Flange Size Specifications

The standard Hurricane RC Monitor inlet is CODE-RLF for direct connection to TFT's Extend-A-Gun RC3. Monitor inlet CODE-RPF is available for direct connection to Extend-A-Gun RC4. The standard outlet is 2-1/2"-6 National Hose male. Various other inlet and outlet fittings are available as shown in Figure 3.3B.


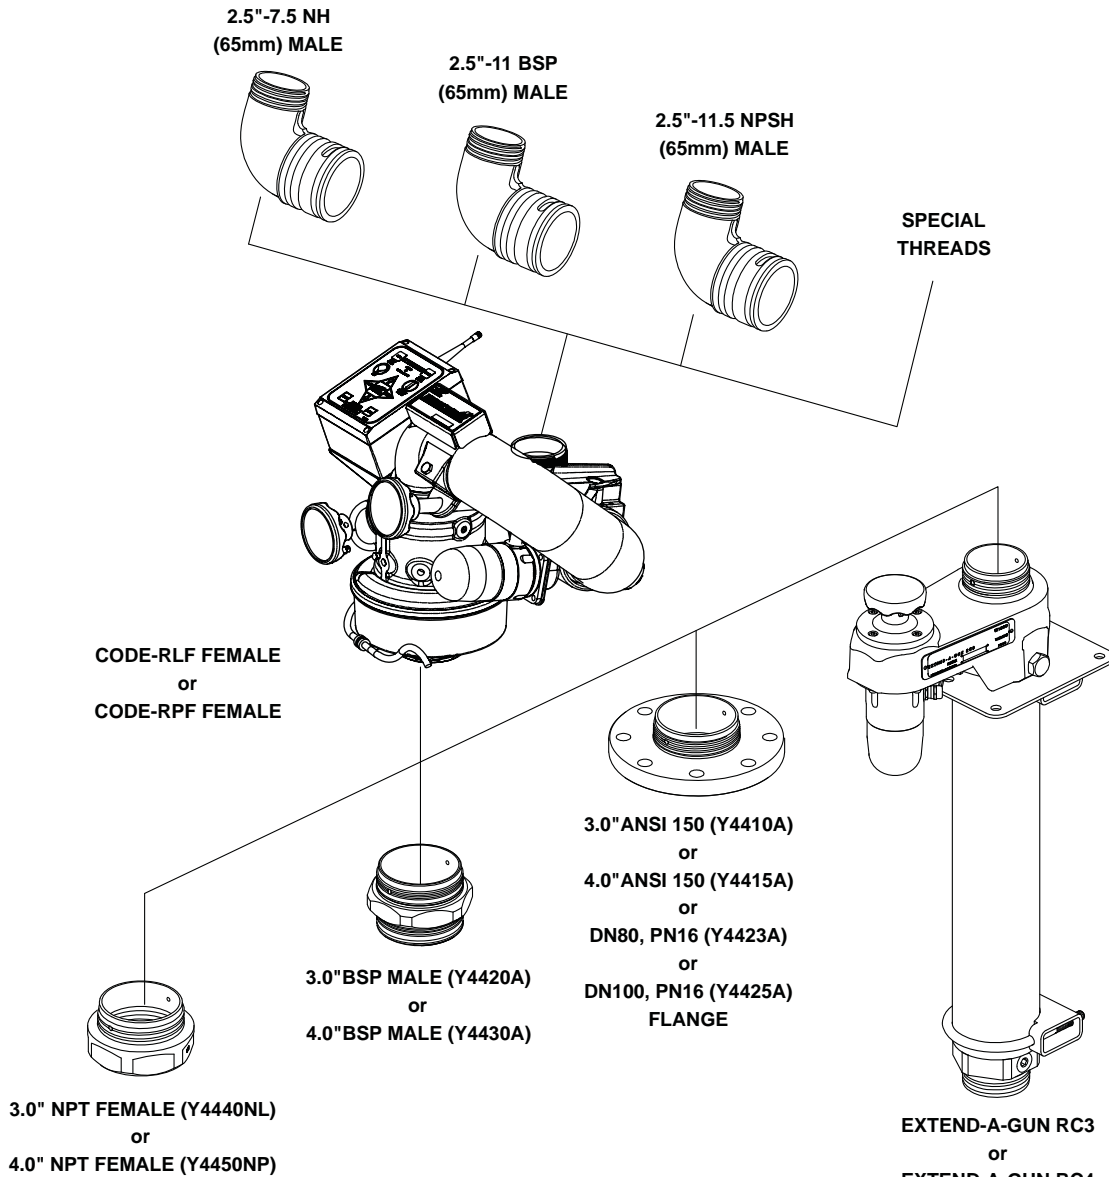


Fig 3.3B
Inlets and Outlets

3.4 OVERALL DIMENSIONS

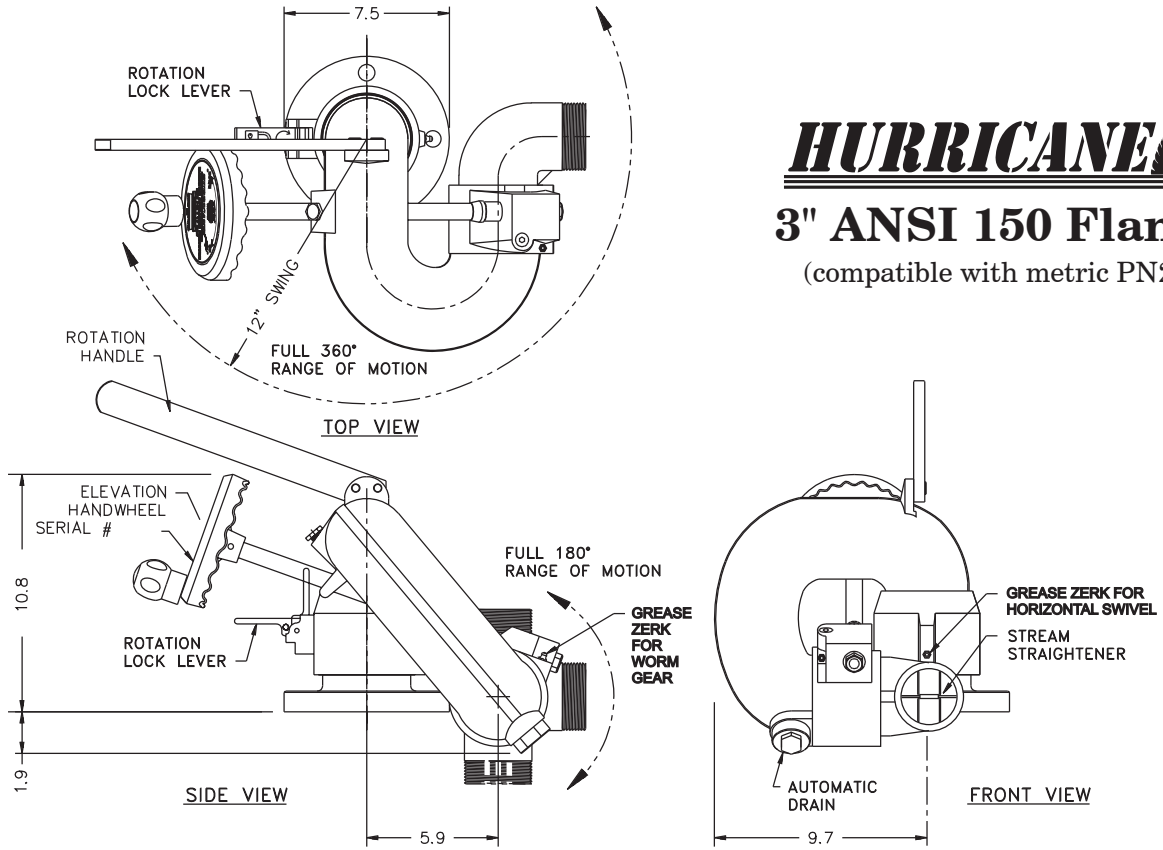


3" ANSI 150 Flange

(compatible with metric PN20)

Fig 3.4A

Hurricane Fixed Monitor Overall Dimensions
w/3" ANSI 150 Flange

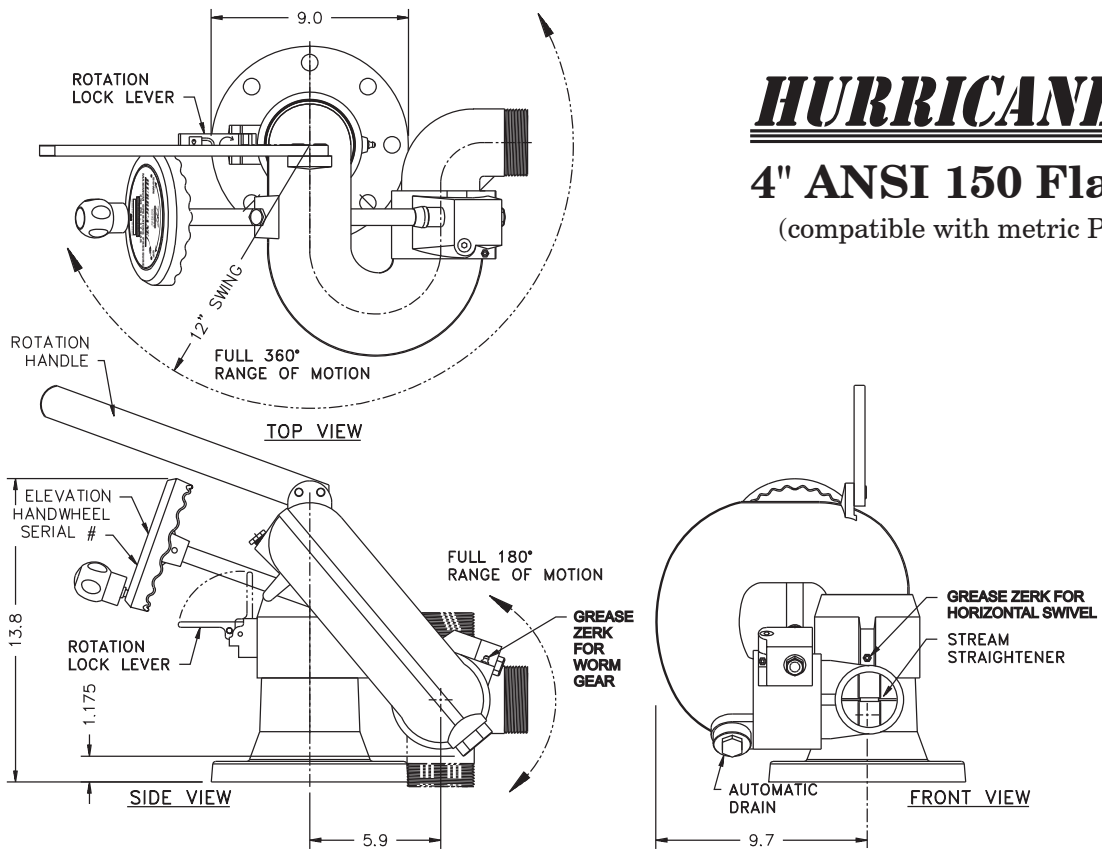


4" ANSI 150 Flange

(compatible with metric PN20)

Fig 3.4B


Hurricane Fixed Monitor Overall Dimensions
w/4" ANSI 150 Flange

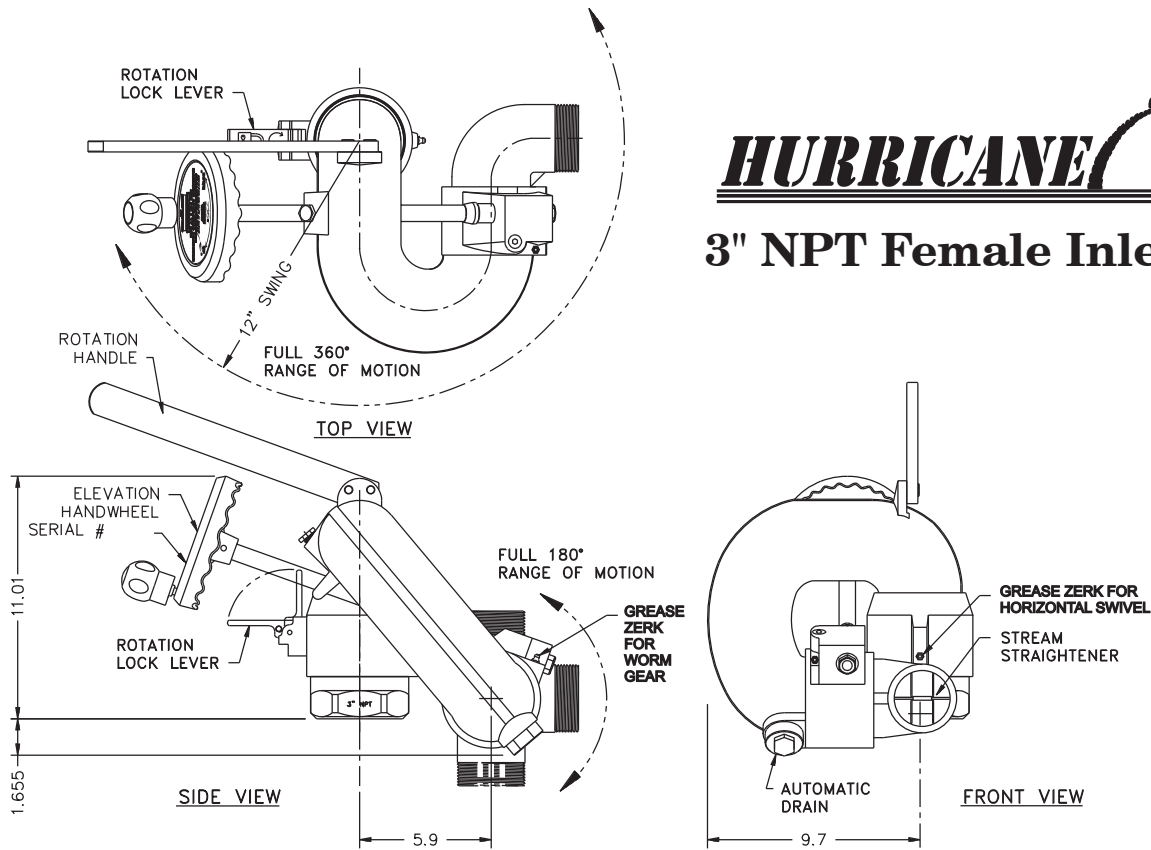

HURRICANE

3" NPT Female Inlet

Fig 3.4C
Hurricane Fixed Monitor Overall Dimensions
w/3" NPT Female Inlet

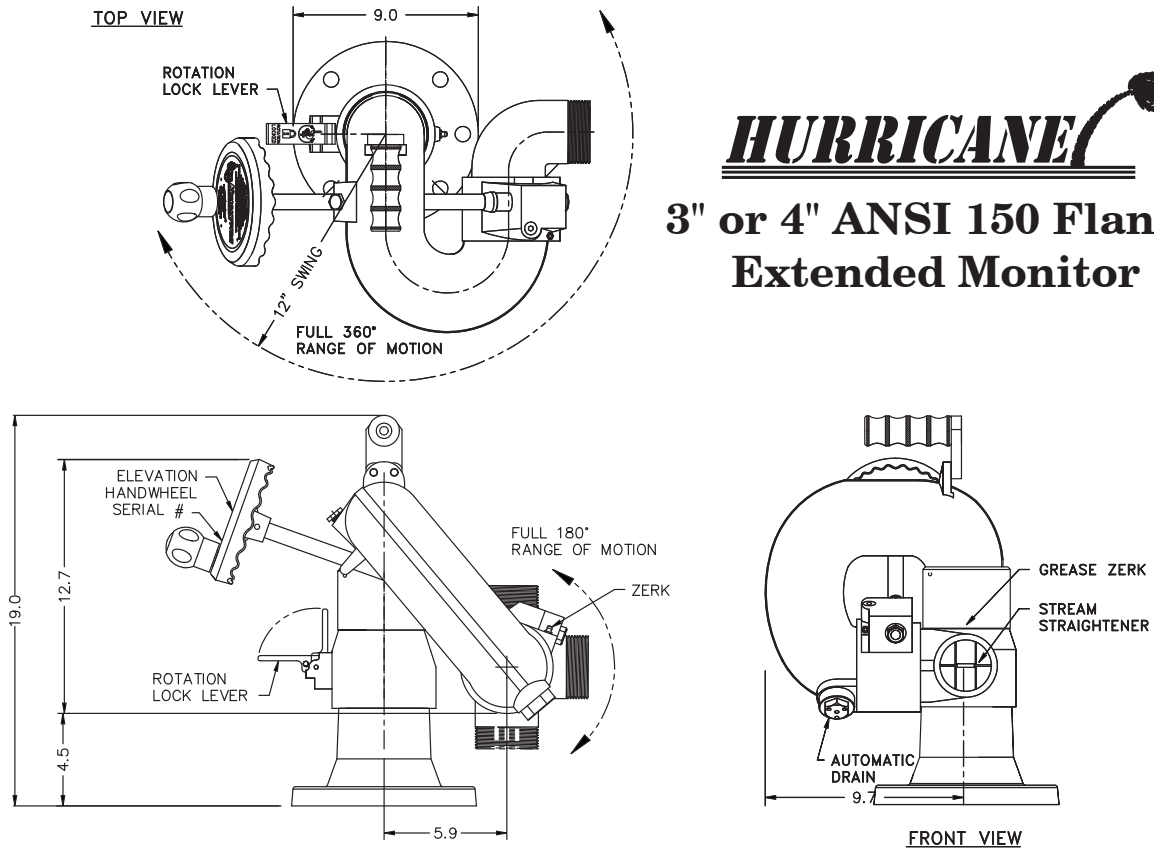

HURRICANE

3" or 4" ANSI 150 Flange Extended Monitor

Fig 3.4D
Hurricane Fixed Extended Monitor Overall Dimensions
w/3" or 4" ANSI 150 Flange

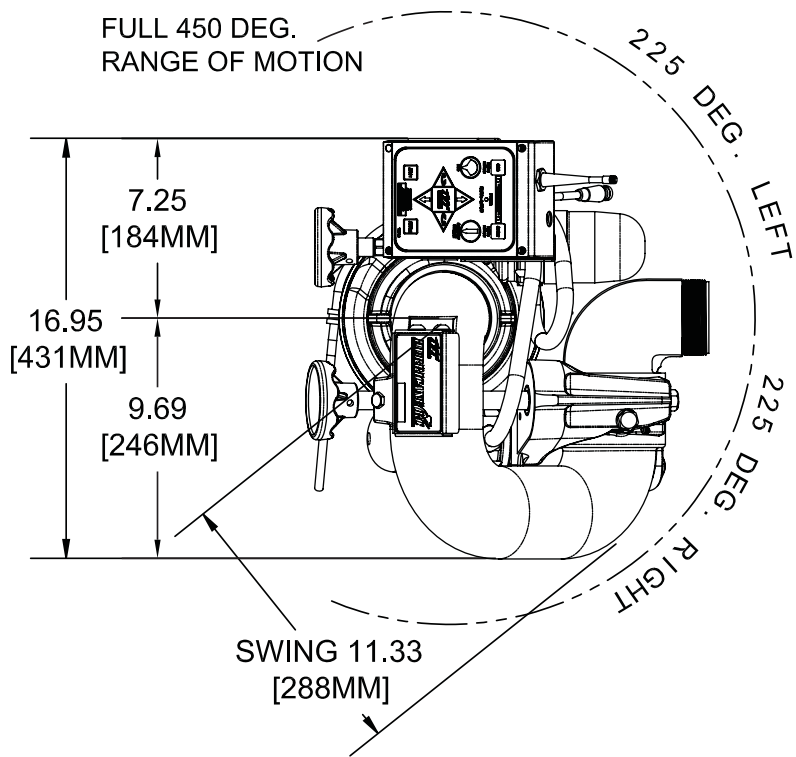
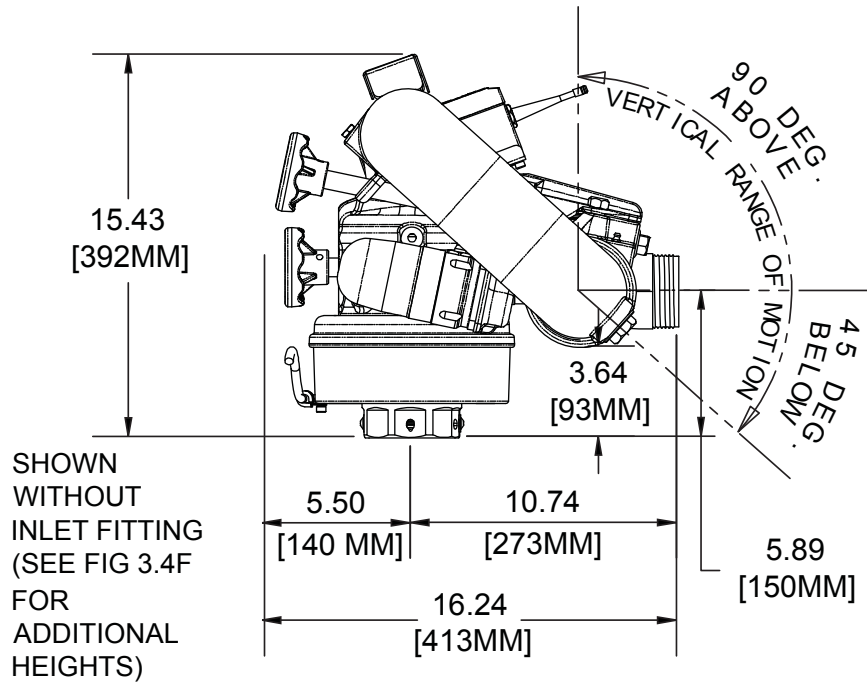


Fig 3.4E
Hurricane RC Overall Dimensions

| MODEL | INLET FITTING TYPE | ADDITIONAL HEIGHT | OVERALL HEIGHT |
|-----------|--------------------------------------|-------------------|------------------|
| XFIH-E1*A | 3" ANSI 125/150 (metric DN8 PN20) | .75" 20 mm | 16.18" 412 mm |
| XFIH-E2*A | 4" ANSI 150 (metric DN100 PN20) | .94" 23 mm | 16.37" 415 mm |
| XFIH-E4*A | metric DN80, PN16 | 2.80" 22 mm | 18.23" 414 mm |
| XFIH-E5*A | metric DN100, PN16 | 2.80" 22 mm | 18.23" 414 mm |
| XFIH-E6*A | 3" NPT Female | 2.00" 51 mm | 14.43" 443 mm |
| XFIH-E7*A | 4" NPT Female | 1.75" 45 mm | 17.18" 436 mm |
| XFIH-E8*A | 3" BSP Male | 2.30" 58 mm | 17.73" 450 mm |
| XFIH-E9*A | 4" BSP Male | 2.30" 58 mm | 17.73" 450 mm |

* The second to last digit in the model number refers to exit thread size and type.

Fig 3.4F

Hurricane RC Overall Height Increase for Inlet Fittings

4.0 INSTALLATION

See Remote Control (RC) Monitor Electrical Controls Supplemental Instructions For Use With Hurricane RC Models

Make sure that the area around the monitor is free from obstructions which would limit its range of motion and usefulness. If a valve is mounted under the Hurricane, make sure the monitor will not interfere with the valve handle. If a butterfly valve is mounted under the monitor make sure that the butterfly valve assembly does not interfere with the flanged base of the Hurricane.

4.1 STRUCTURAL REQUIREMENTS FOR MONITOR MOUNTING

The structure that the Hurricane Monitor is mounted to must withstand the internal pressure of the monitor as well as shear and bending forces due to nozzle reaction. Nozzle reaction can be as high as 1,050 lbs (480 kg) (1250 gpm at 250 psi).

For flanged connections, the use of flat flanges without raised faces is recommended. Use a ring gasket as defined in ASME 16.21 or ISO 7483. Tighten flange bolts in an alternating sequence as shown in figure 4.1. Tighten to 76-80 ft-lb (100-110 Newton-Meters).

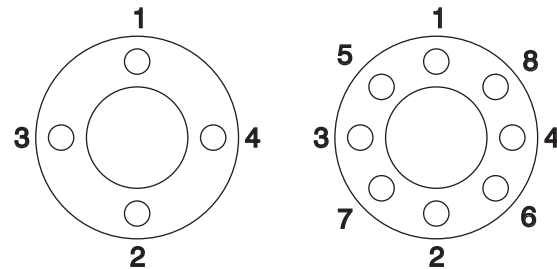


Fig 4.1 Flange Bolt Tightening Sequence

WARNING


Injury can result from an inadequately supported monitor. The monitor mount must be capable of supporting the nozzle reaction force which can be as high as 1050 lbs (480 kg). Flanges and pipe made from plastic are inadequate for monitor mounting and must not be used. This monitor is not recommended for portable use.

4.2 INLET MOUNTING AND TRAVEL RANGES

4.2.1 INLET FITTING OR EXTEND-A-GUN RC INSTALLATION

The Hurricane RC Monitor is available with various inlet fittings as shown in figure 3.3B. The Hurricane RC Monitor also connects directly to TFT's Extend-A-Gun RC3 or RC4. The fittings and Extend-A-Gun RC are attached to the monitor by means of a threaded joint with an o-ring seal. Once in the proper orientation, the threaded joint is locked from rotation by two 1/4-28 button head cap screws as shown in figure 4.2.1A. This makes for easy removal of the monitor, since the large threads of the joint are not tightened and do not have any thread locking compounds on them. It is best to install the inlet fitting or Extend-A-Gun RC to the apparatus and then install the monitor to the inlet fitting or Extend-A-Gun RC. This gives more room to install the bolts in the case of flanged fittings. Referring to figures 4.2.1A and 4.2.1B, the installation sequence is as follows:

- 1) Install inlet adapter or Extend-A-Gun RC to apparatus.
 - Mount so that 180 degree apart threaded cross holes will give desired direction relative to the "Straight Back Reference Mark" when the monitor is installed.
- 2) Screw monitor onto inlet adapter or Extend-A-Gun RC until threaded joint bottoms out.
 - Do not use pipe dope or Loctite on the inlet base threads. These threads are sealed with an o-ring. The use of thread locking compounds will make removal difficult.
- 3) Unscrew monitor slightly until a pair of 90 degrees apart slots line up with the 180 degrees apart threaded cross holes in the inlet adapter or Extend-A-Gun RC.
 - Orient monitor so that the Straight Back Reference Mark is facing the desired direction.
 - Slots will line up with threaded cross holes every 90 degrees of rotation.
 - Monitor may be unscrewed up to one full turn from the bottomed out position.
- 4) Install 1/4-28 by 1/2 long button head cap screws and washers in the two threaded cross holes.

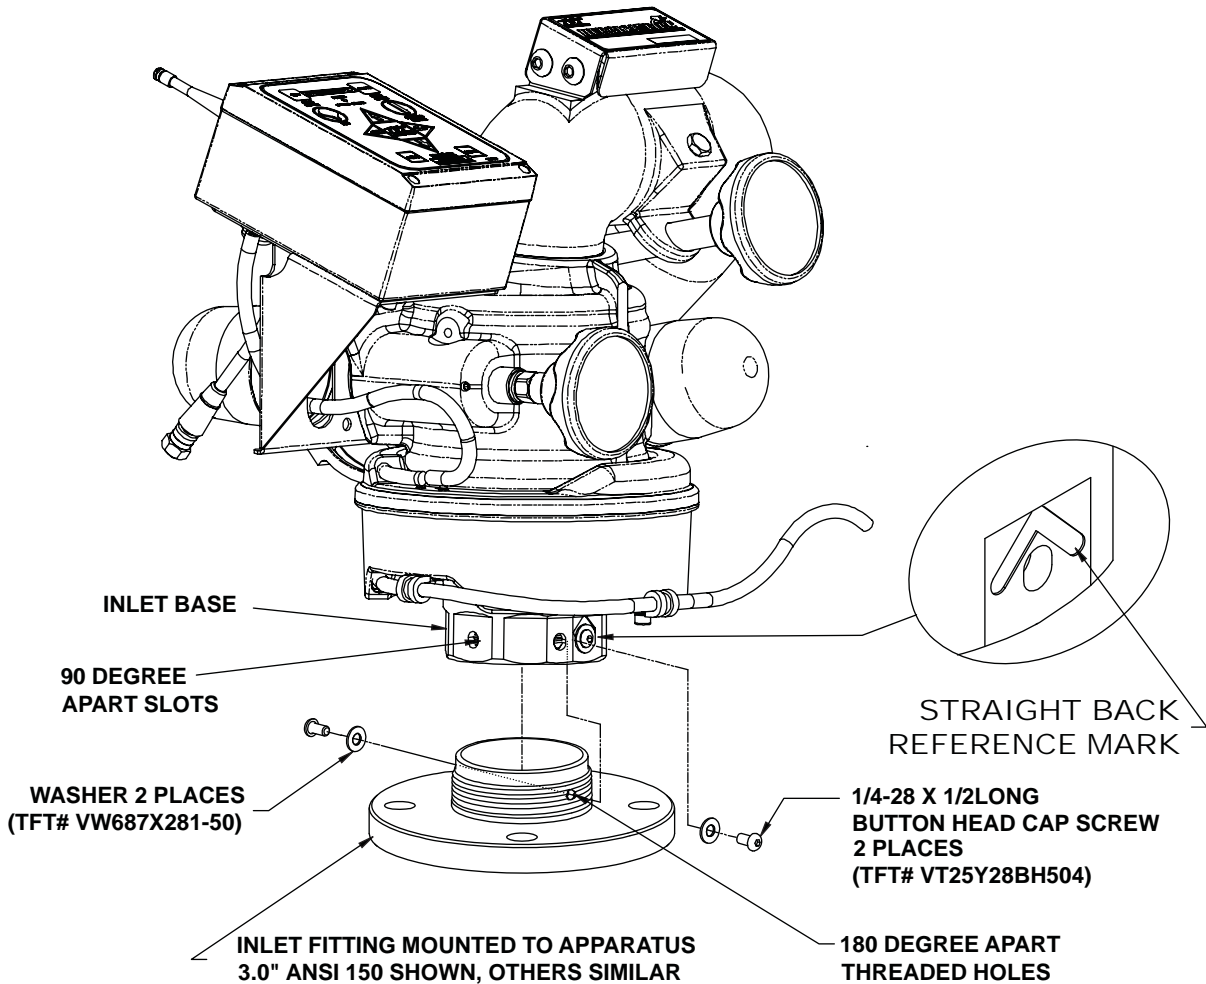

(This view shown without power cable guide for purposes of illustration.)

Fig 4.2.1A
3" Inlet Fitting Connection

The Extend-A-Gun RC manual override knob may be mounted in any one of four possible orientations (90 degrees apart).

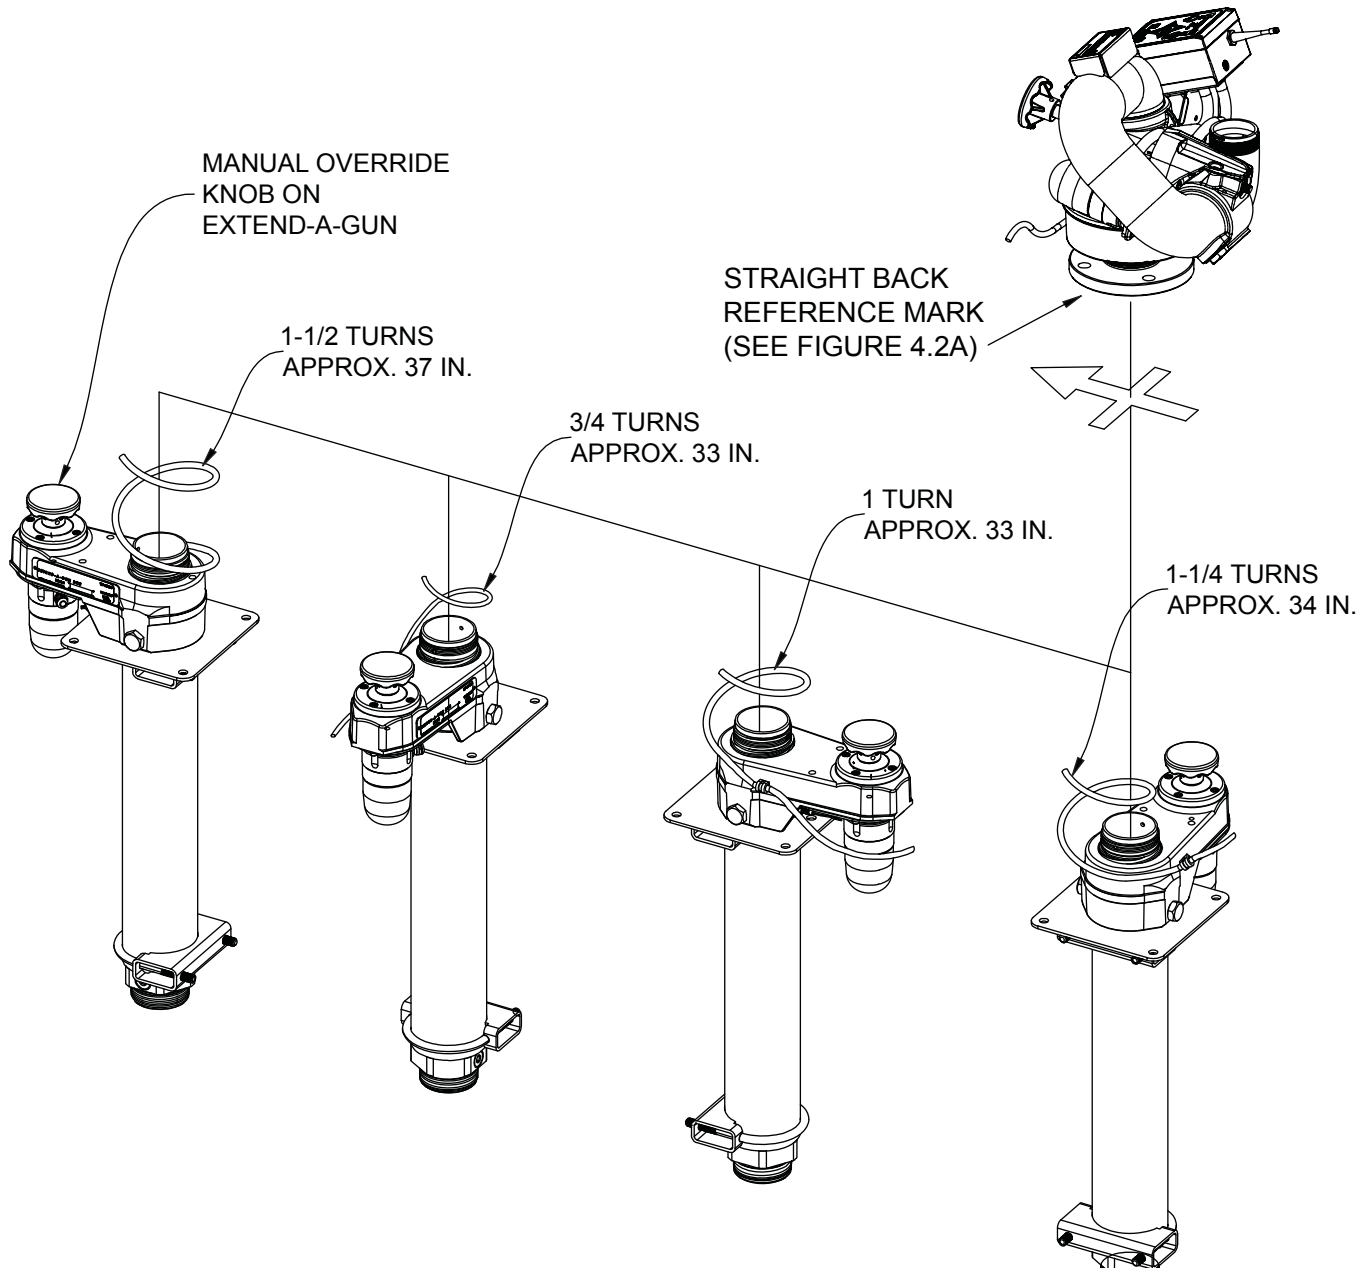


Fig 4.2.1B Possible Extend-A-Gun RC Mounting Orientations

The Extend-A-Gun manual override knob may be mounted in any of four possible orientations (90 degrees apart) relative to the Straight Ahead Reference Mark on the monitor.

NOTE: Hurricane RC monitor, for use with Extend-A-Gun RC, comes with the wire installed in a nylon tube. The nylon tubing gives the wire additional stiffness so it better follows as the Extend-A-Gun RC extends or retracts. A fitting is also supplied and is to be used where the nylon tubing and wire pass through the deck.

4.2.2 HORIZONTAL ROTATION TRAVEL STOPS

The range of Horizontal (left-right) travel for the Hurricane RC monitor is limited to 450 degrees or 225 degrees from either side of a nozzle discharge position. Horizontal (left-right) travel stop bolts may be installed in the monitor to limit travel as shown in figure 4.2.2A and 4.2.2B. Note that left and right are relative to the "Straight Back Reference Mark" shown in figure 4.2.2A, and refer to the operator's position behind the monitor, opposite the nozzle's discharge direction. Also, Figure 4.2.2A shows the range of travel for the various stop bolt locations along with installation notes as shown in Figure 4.2.2B.

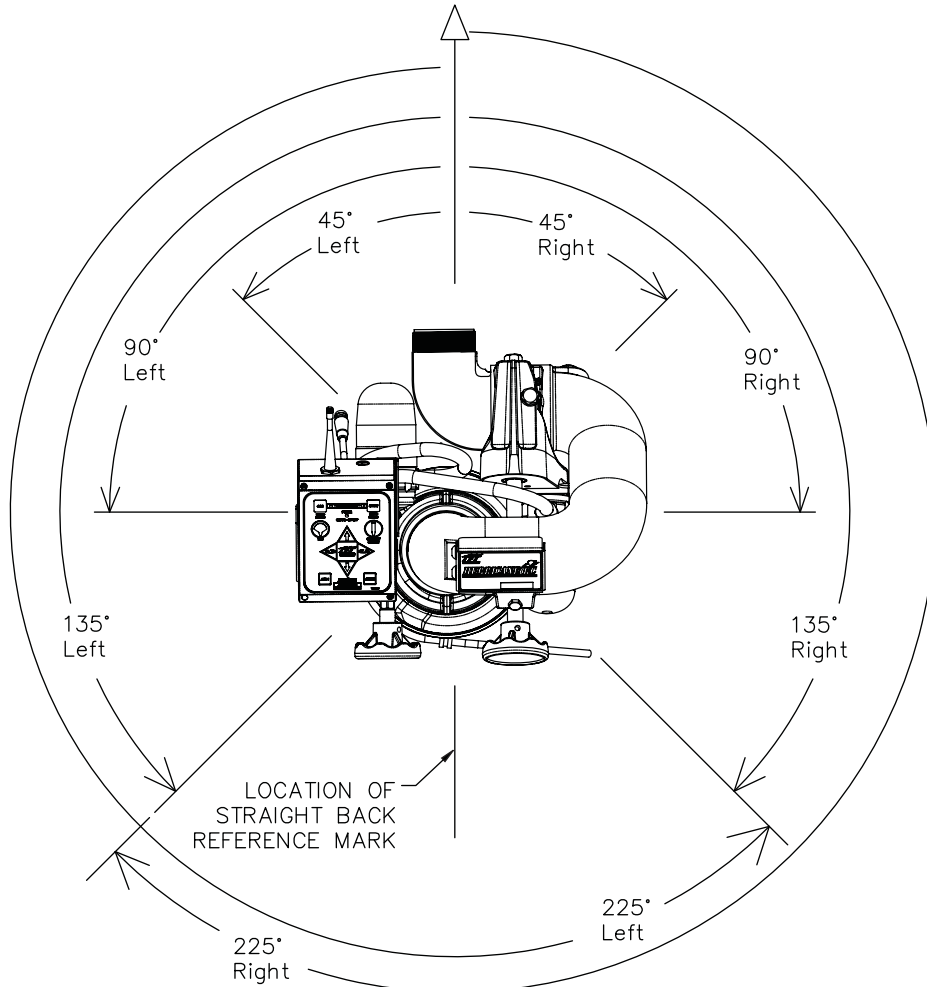


Fig 4.2.2A
Horizontal Travel Limits

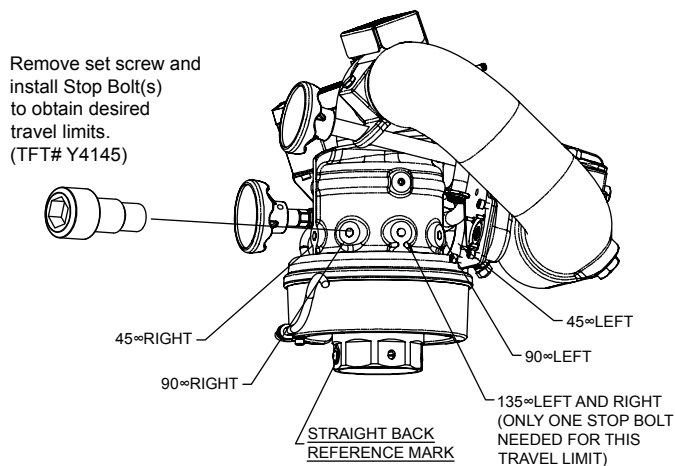



Fig 4.2.2B
Horizontal Travel Stop Bolt Locations

4.3 NOZZLE INSTALLATION

The Hurricane Fixed Monitor is available with 2.5" male NH or BSP threads to attach the nozzle. Simply screw the nozzle onto the monitors exit threads.

The Hurricane RC monitor outlet thread types are as shown in figure 3.3B. The nozzle is simply screwed onto the Hurricane RC monitor's exit threads. Insure that the nozzle's coupling does not make contact with the elevation drive housing when the monitor is in its highest elevation position.

For nozzles with electric pattern control, a waterproof connector wire is provided at the bottom outlet of the Hurricane RC's control station box. This wire attaches directly to TFT's electric Masterstream 1250 nozzle. The electric actuator box of nozzle must be oriented to the top side of nozzle for the connection wire to extend 90° above horizontal and 45° below elevation movement. (see figure 4.3 and refer to *RC Monitor Electrical Controls Supplemental Instructions* for properly attaching female to male connectors). Any other nozzle should have the corresponding male electrical connector installed and long enough wire to extend 90° above horizontal and 45° below elevation movement of the nozzle. **DO NOT CUT OFF THE FEMALE CONNECTOR ON THE MONITOR. THIS CONNECTOR IS MOLDED ONTO THE WIRE AND MUST REMAIN ON TO MAINTAIN THE WATER TIGHTNESS OF THE ELECTRICAL SYSTEM.**

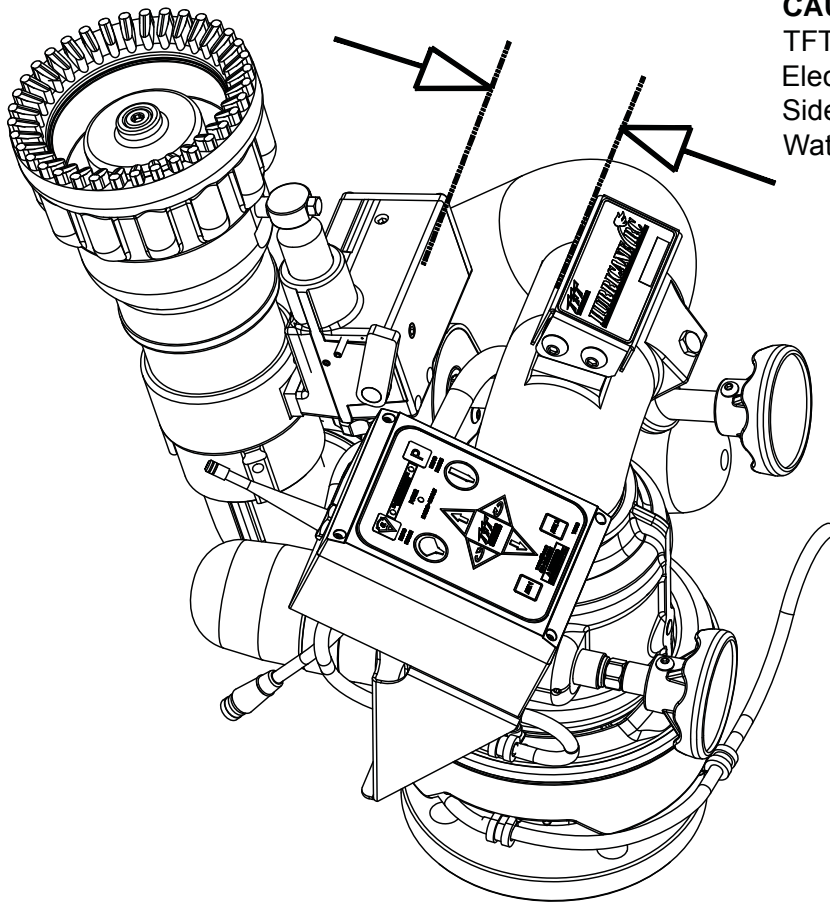

CAUTION:

TFT's Master Stream 1250 ER Nozzle Electric Actuator Box must be on the Top Side for its Edge to line up with Monitor Waterway Top Body as shown.

Fig 4.3
Correct ER Nozzle Install Orientation

CAUTION

The nozzle threads must match the threads of the Hurricane monitor in both size and type. Mismatched or damaged threads may cause the nozzle to leak or uncouple under pressure and could cause injury.

CAUTION

Do not connect aluminum to brass or brass to aluminum. Dissimilar metals coupled together can cause galvanic corrosion that will freeze the threaded joint or cause complete loss of thread engagement. If dissimilar metals must be coupled together, the effects of corrosion can be greatly delayed by various coatings on the metal such as powder paint, hard anodizing, or silicone grease.

4.4 PRESSURE GAUGE PORT

There is a 1/4" NPT female threaded hole located behind the elevation hand wheel for the installation of a pressure gauge if desired. This hole has a pipe plug installed from the factory. Unscrew the pipe plug and install the gauge using pipe sealant. Make sure that the gauge does not interfere with the handwheel.

4.5 AUTOMATIC DRAIN

There is an automatic drain on the Hurricane and Hurricane RC installed from factory, that will empty the water from the low point of the lower bend to prevent freezing (Figure 3.2A and 3.2B). The valve closes when the internal pressure is approximately 5 psi (0.3 bar) or above and opens when the internal pressure is below 5 psi (0.3 bar).

In areas that experience freezing, it is important that the automatic drain NOT be disabled. If however, there is no chance of freezing, the following procedure will eliminate the drain valve function.

Refer to the appropriate exploded view in Section 9.0.

- 1) Unscrew the drain assembly from the monitor and remove the screw and washer.
- 2) Turn over the rubber drain valve so that the raised edge is facing down, against the face of the housing.
- 3) Reinstall the washer and screw. Reinstall the drain assembly.

A secondary drain valve should be installed on the monitor's inlet piping to drain water in the riser.

5.0 OPERATION

5.1 HORIZONTAL ROTATION CONTROL

The HURRICANE can rotate from side to side on its swivel base. Lift the rotation lock lever and rotate the monitor right or left using the handle mounted on the top of the monitor. To lock the monitor in position depress the rotation lock lever. A small spring holds the rotation lock lever in the unlocked position when it is disengaged. When the monitor is not in use, the rotation lock lever should be kept in the locked position.

5.2 ELEVATION CONTROL

The hand wheel controls the nozzle elevation. Turn the hand wheel clockwise to raise the nozzle and counter clockwise to lower it.

5.3 RECOMMENDED PARK POSITION

For truck mounted applications, it is recommended that the monitor be parked in a position such that the monitor's nozzle rests against a bracket or support surface. This will minimize bouncing of the nozzle when the apparatus is traveling. Always be sure the monitor is properly parked before moving the truck and know the overall height to avoid damage from overhead obstructions such as doors or bridges.

On many vehicle installations, the monitor is the highest point on the apparatus. Often it is critical that the monitor be properly parked before driving to avoid damage to overhead obstructions, such as door openings. In these cases, the use of a switch wired into the apparatus's "door open" circuit is highly recommended. The switch would be wired to give a "door open" signal if the monitor is not in the parked position. Due to the variety of possible mountings and nozzles, it is the installer's responsibility to supply the appropriate switch with mounting and wire it into their system. Always check parked position of monitor before moving apparatus.

5.4 OVERRIDE KNOBS

In the event of electrical system failure of the monitor or fire truck, Hurricane RC is factory supplied with override knobs so the monitor may be manually operated. To make the Hurricane RC more compact, the override knobs may be removed.

6.0 FLOWS AND PRESSURES

The Hurricane monitor is designed for a maximum pressure of 250 psi (17 bar). Do not exceed these limits.

WARNING The stream exiting a monitor is very powerful and capable of causing injury and property damage. Make sure the monitor is securely attached to the base and pointing in a safe direction before water to the monitor is turned on. Use care in directing the stream.

Because the stream trajectory can obscure the view of the operator, it is recommended that a spotter be used to accurately direct the stream.

6.1 STACKED TIPS FLOW AND REACH

| NOZZLE DIAMETER (inches) | INLET PRESSURE (PSI) | | | | | | | |
|--------------------------|----------------------|----------------|------------|----------------|------------|----------------|------------|----------------|
| | 40 | | 60 | | 80 | | 100 | |
| | FLOW (GPM) | REACTION (LBS) | FLOW (GPM) | REACTION (LBS) | FLOW (GPM) | REACTION (LBS) | FLOW (GPM) | REACTION (LBS) |
| 1.375 | 360 | 120 | 440 | 180 | 500 | 240 | 560 | 300 |
| 1.50 | 420 | 140 | 520 | 210 | 600 | 280 | 670 | 350 |
| 1.75 | 580 | 190 | 700 | 290 | 810 | 380 | 910 | 480 |
| 2.00 | 750 | 250 | 920 | 380 | 1000 | 500 | 1190 | 630 |

| NOZZLE DIAMETER (MM) | INLET PRESSURE (BAR) | | | | | | | |
|----------------------|----------------------|---------------|--------------|---------------|--------------|---------------|--------------|---------------|
| | 2.8 | | 4.1 | | 5.5 | | 7 | |
| | FLOW (l/min) | REACTION (KG) | FLOW (l/min) | REACTION (KG) | FLOW (l/min) | REACTION (KG) | FLOW (l/min) | REACTION (KG) |
| 35 | 1360 | 50 | 1670 | 80 | 1890 | 110 | 2120 | 140 |
| 38 | 1590 | 60 | 1970 | 100 | 2270 | 130 | 2540 | 160 |
| 45 | 2200 | 90 | 2650 | 130 | 3070 | 170 | 3440 | 220 |
| 50 | 2840 | 110 | 3480 | 170 | 4010 | 230 | 4500 | 290 |

Fig. 6.1A
Stacked Tips Flow Table

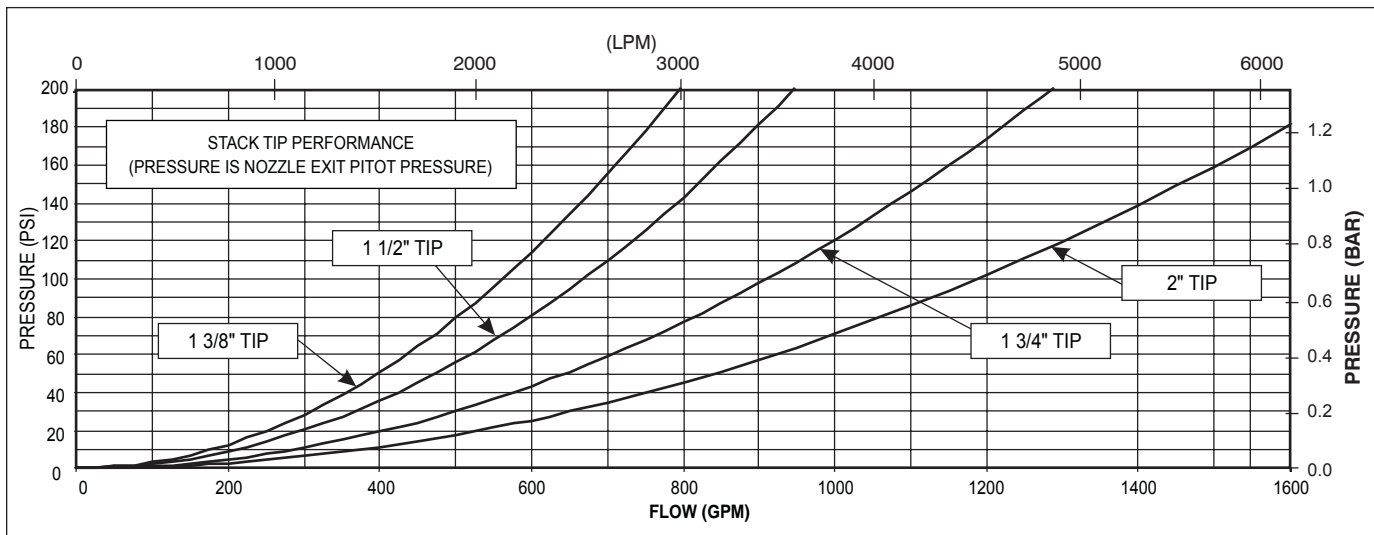


Fig 6.1B
Stacked Tips Flow Graph





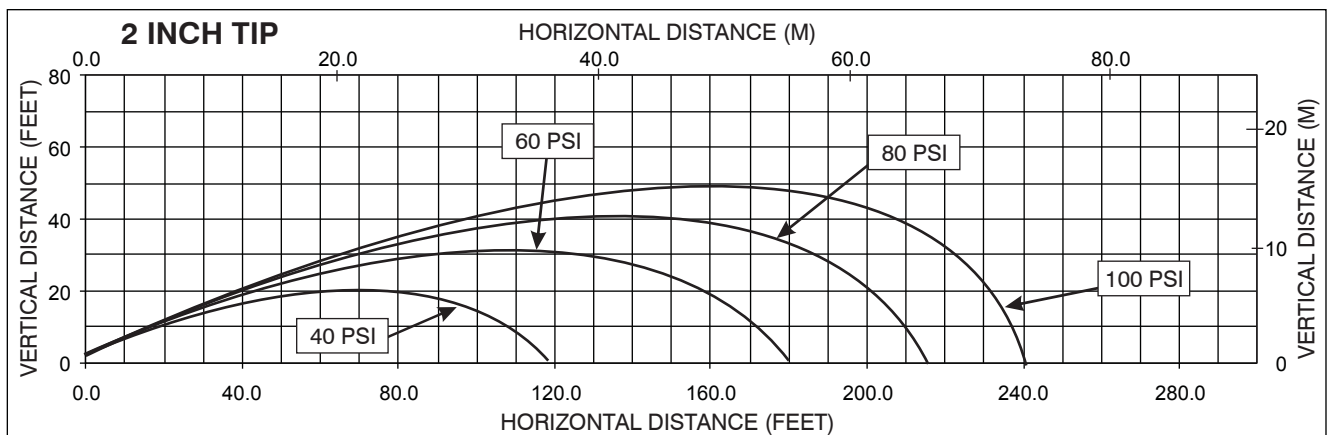



Fig 6.1C
Stacked Tips Stream Trajectory Graphs

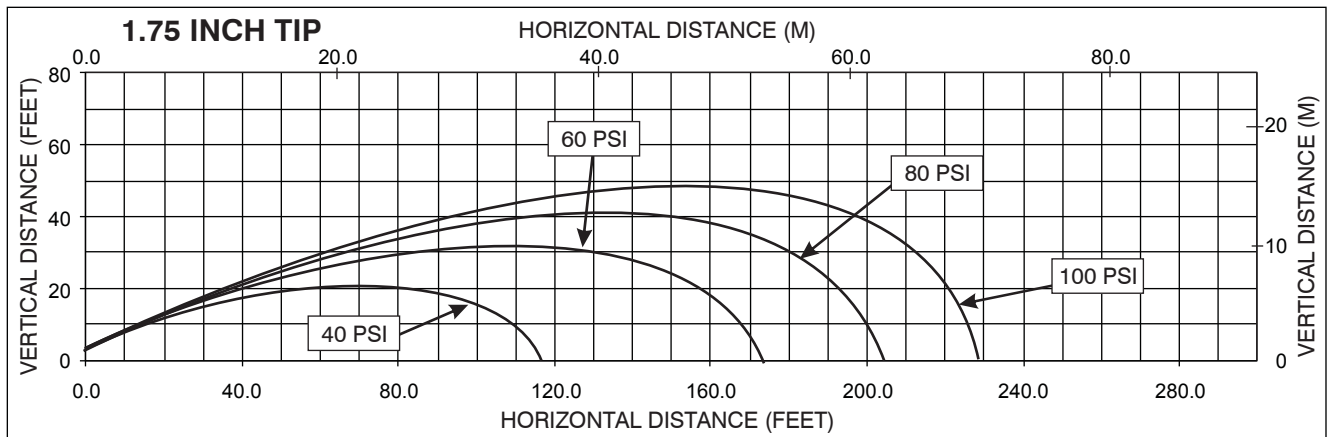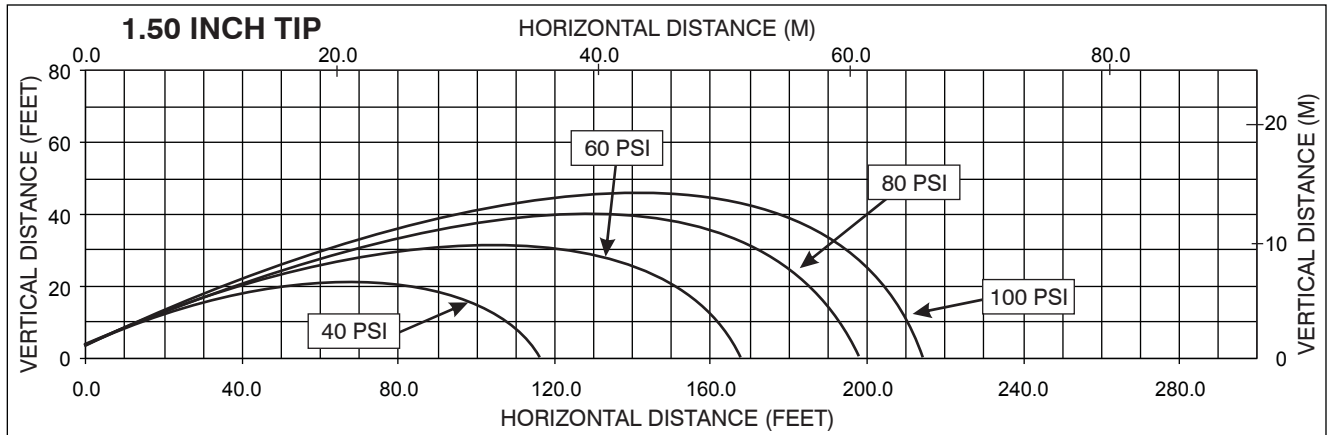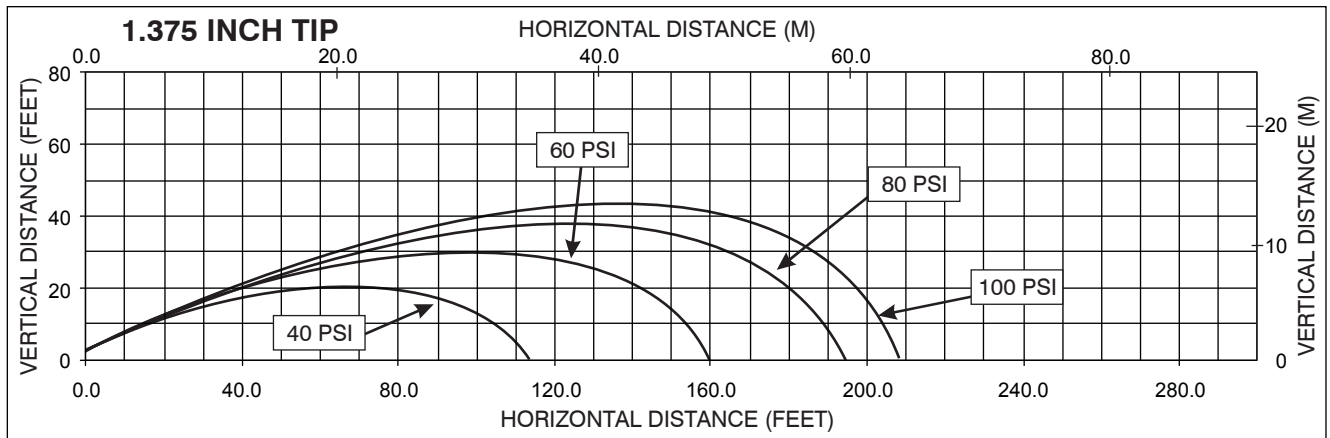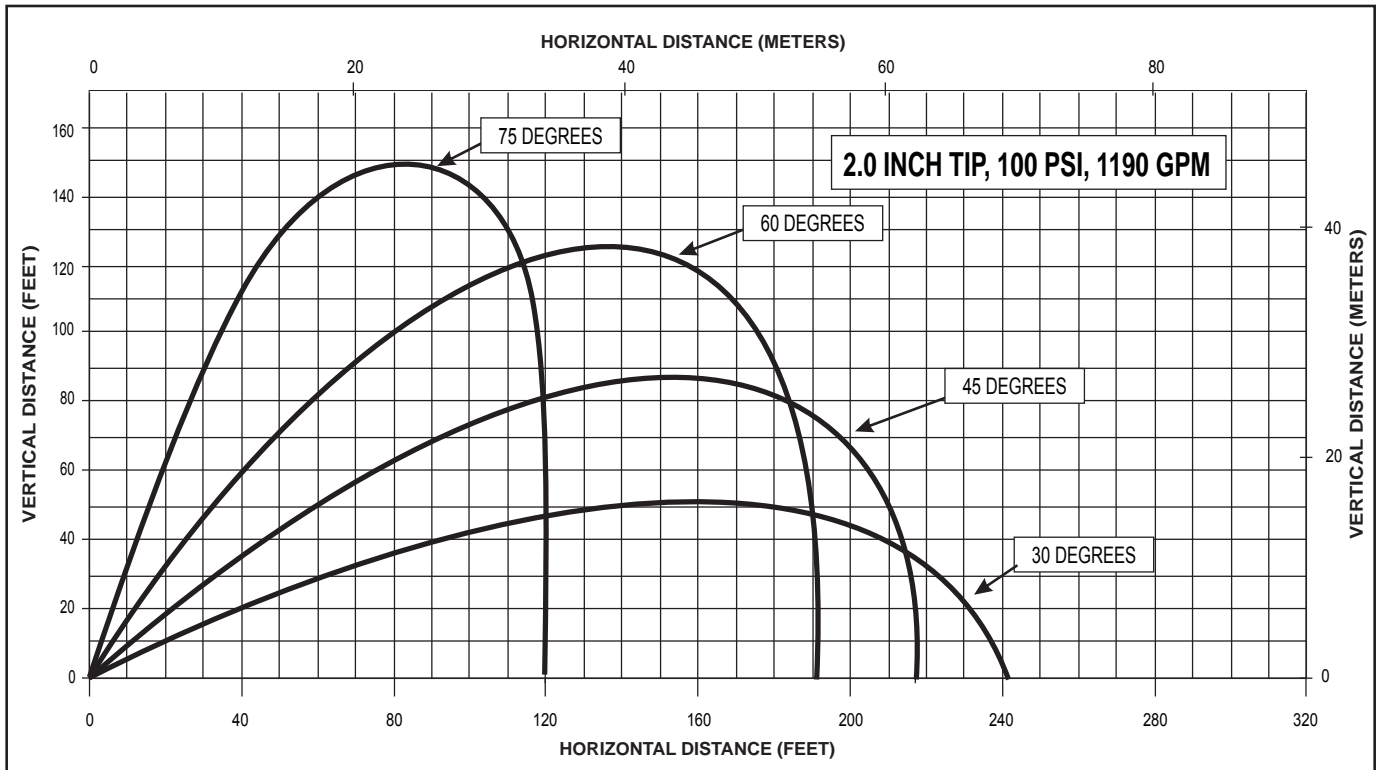

This graph is approximate only.

Critical applications should be tested in actual conditions to verify adequate reach.

Fig 6.1D
Effects of Elevation on Trajectory

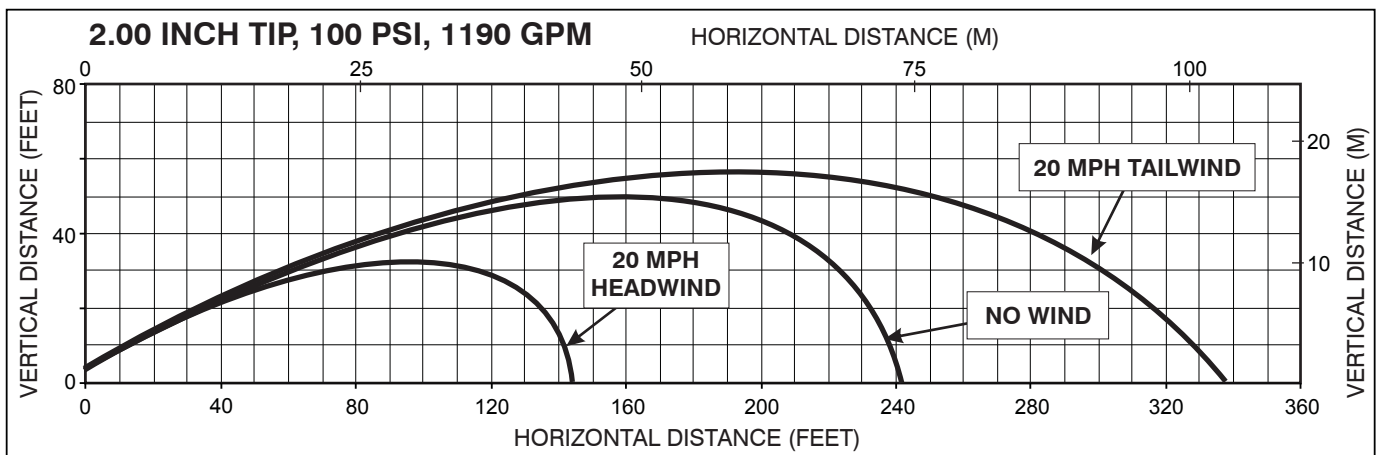

This graph shows approximately how a moderate wind can affect stream reach. 1 ft = 0.3048 m

Fig 6.1E
Effects of Wind on Reach


6.2 AUTOMATIC MASTERSTREAM NOZZLES

Automatic nozzles maintain a constant pressure by adjusting their orifice to match the available flow. Consult the nozzle's manufacturer for maximum flow and pressure ratings. In all cases, do not exceed 1250 gpm (5000 l/min). TFT's Masterstream 1250 Nozzle has a 150-1250 gpm (600 - 5000 l/min) flow range. Masterstream 1250 Nozzle operating instructions (Item Number LIM-030) are available on TFT's website: www.tft.com

6.3 STREAM STRAIGHTENERS


6.3.1 STREAM STRAIGHTENERS WITH STACKED TIPS

Stream quality and reach, especially with stacked tip (smooth bore) nozzles, is generally improved with a stream straightener because the water must make many bends before it reaches the nozzle.

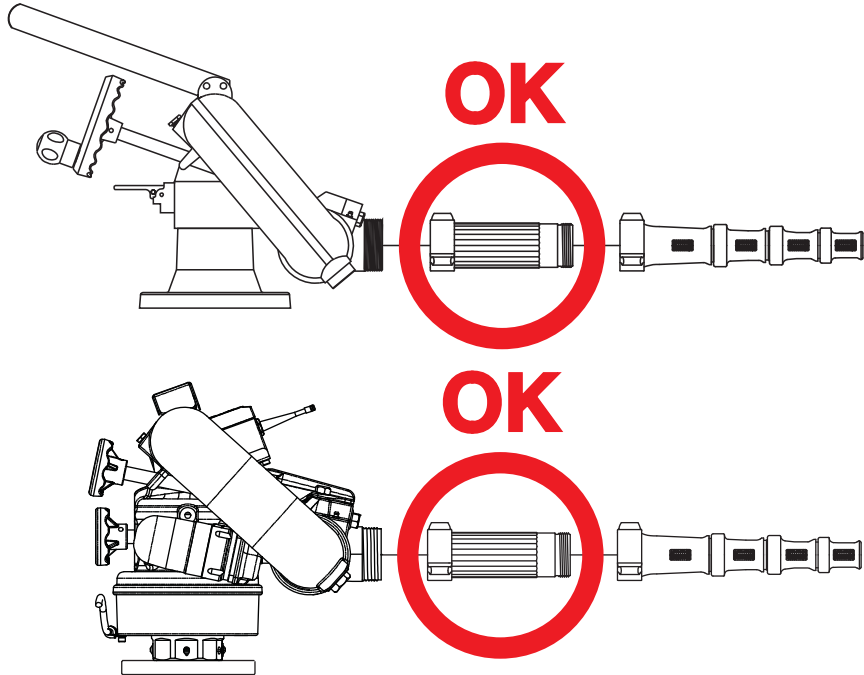

6.3.2 STREAM STRAIGHTENERS WITH FOG NOZZLES

When using a fog nozzle, it is recommended that no stream straightener be used since the fog nozzle's flow path generally serves as a stream straightener. Use of a stream straightener with a fog nozzle will increase the stress on the monitor's gear train and may lead to premature wear.

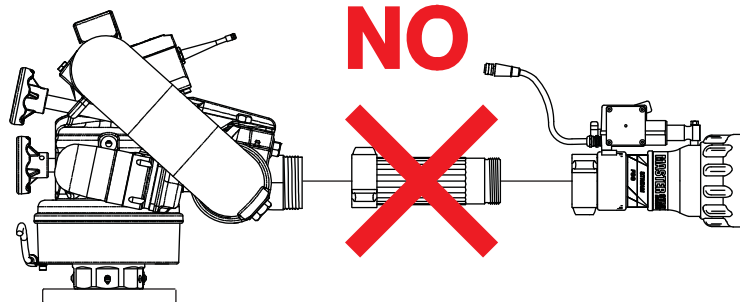

7.0 MAINTENANCE AND INSPECTION

The Hurricane monitor requires little maintenance. The monitor should be kept clean and free of dirt. All controls should be checked for freedom of movement and proper operation before each use. Consult factory for recommended service procedure. Any inoperable or damaged parts should be repaired or replaced immediately.

- For Hurricane Fixed Monitor make sure that the monitor swivels freely on its base when the anti-rotation lock is released and that the monitor will not rotate when the anti-rotation lock is engaged.
- Make sure that the monitor's handwheels rotate freely and without binding throughout its range of travel.
- Make sure that there are no leaks when the monitor is flowing water.
- Make sure the nozzle is free of debris.

7.1 LUBRICATION

7.1.1 ELEVATION CONTROL WORM GEAR (RC Models)

Turn the hand wheel to raise the nozzle to its highest position and pump medium viscosity automotive chassis grease into the grease fitting on the Elevation worm gear housing until excess appears at the joint. See Fig. 3.2 for grease zerk location.

7.1.2 HORIZONTAL ROTATION WORM GEAR (RC Models)

The Hurricane RC monitor generally should not require greasing in the Horizontal (left-right) worm gear. In the event that the operation becomes stiff, grease may be applied to the horizontal worm gear grease port shown in Fig. 3.2. Use medium viscosity automotive chassis grease. Apply only enough grease to restore normal operation. If greasing does not restore normal operation, inspect for other causes of stiff operation.

Note: Do not over pump grease to Horizontal worm gear. The monitor's Horizontal worm gear greased areas lead to the wire skirt/cable guide that would trap several pounds of grease before becoming visible.

7.1.3 ELEVATION CONTROL WORM GEAR & HORIZONTAL SWIVEL (Manual Models)

Turn the hand wheel to raise the nozzle to its highest position and pump medium viscosity automotive chassis grease into the grease fitting on the worm gear housing until excess appears at the joint. Pump grease into the fitting on the horizontal swivel joint until excess appears at the joint.

7.2 PERFORMANCE TESTING

Performance tests should be conducted on the Hurricane monitor after repairs are made, or any time a problem is reported to verify operation in accordance with Task Force Tips test procedures. Consult the factory for the test procedure that corresponds to the model and serial number of your monitor. Any equipment that fails the test criteria should be removed from service immediately. Equipment can be returned to the factory for service and testing.


8.0 TROUBLESHOOTING

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|-----------------------------|--|---|
| Leaks | Debris or damage in seal area | Clean out debris or replace damaged parts |
| Elevation Binding | Debris or damage to elevation drive parts | Clean out debris or replace damaged parts |
| | Lack of lubricant | Grease, see section 7.1 |
| Horizontal Rotation Binding | Debris or damage to horizontal drive parts | Clean out debris or replace damaged parts |
| | Lack of lubricant | Grease, see section 7.1 |

9.0 HURRICANE DRAWING & PARTS LIST

| | |
|--|----|
| 9.1 HURRICANE XFI SERIES | 22 |
| 9.2 HURRICANE XFIE EXTENDED SERIES | 23 |
| 9.3 HURRICANE RC MONITOR ASSEMBLY | 24 |
| 9.4 ELEVATION CHAIN DRIVE ASSEMBLY..... | 26 |
| 9.5 GEAR MOTOR ASSEMBLY | 26 |
| 9.6 MONITOR CONTROL BOX ASSEMBLY..... | 27 |


9.1 HURRICANE XFI SERIES

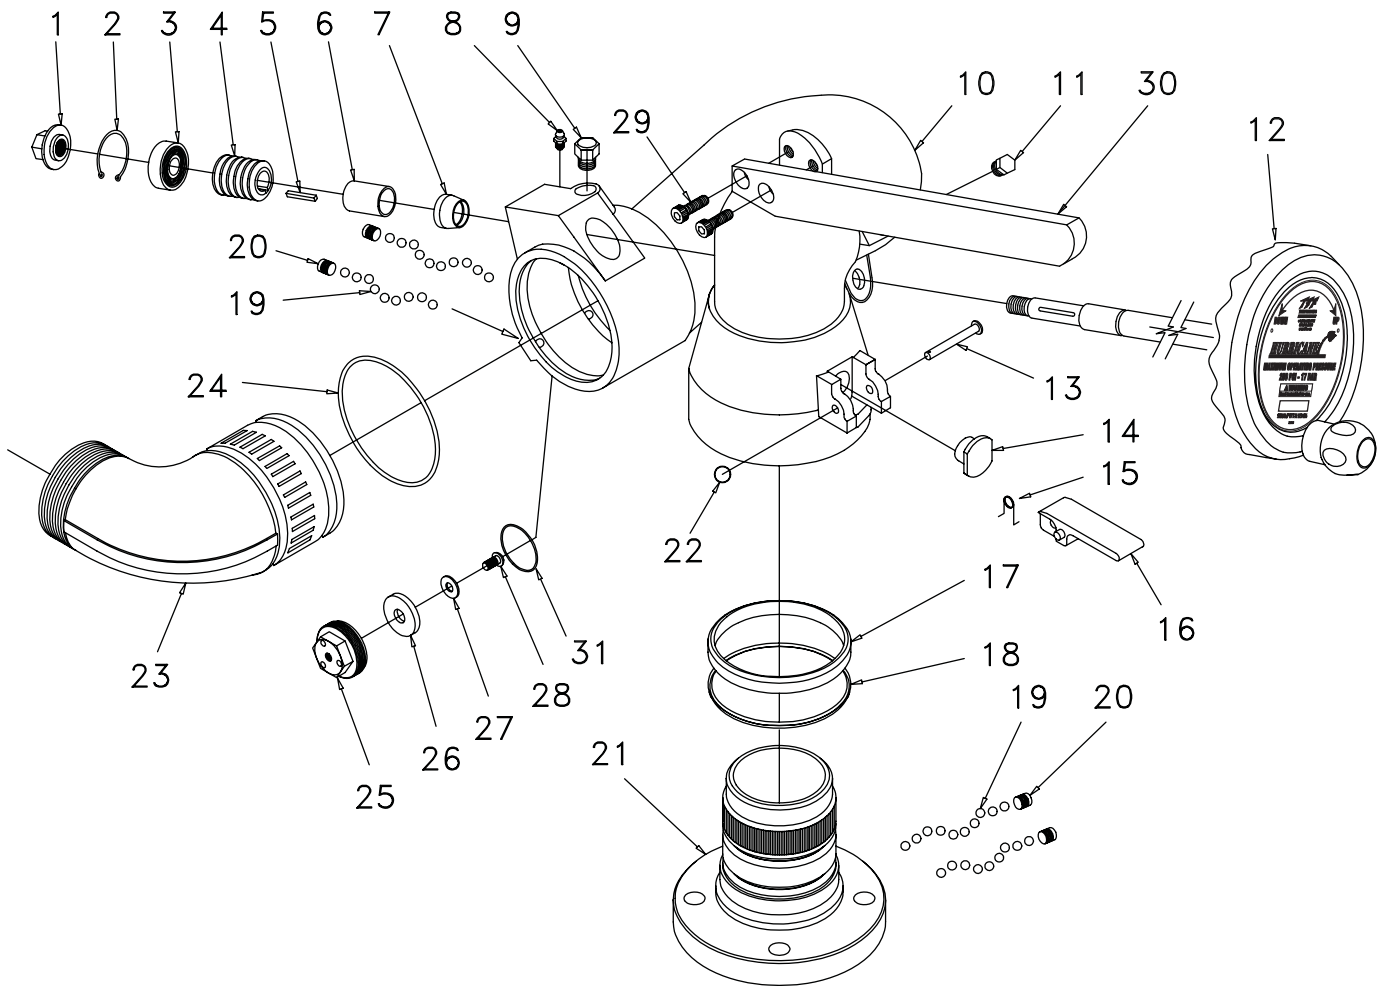

| # | DESCRIPTION | QTY | PART # |
|----|----------------------|-----|-------------|
| 1 | Shaft Nut | 1 | X210 |
| 2 | SNAP RING | 1 | VR4220 |
| 3 | SKF6202-2RS BRNG | 1 | VM4250 |
| 4 | WORM | 1 | X220 |
| 5 | KEY 1/8" X 1.00" | 1 | X225 |
| 6 | BUSHING | 1 | X230 |
| 7 | BOOT | 1 | X240 |
| 8 | 1/4-28 GREASE ZERK | 2 | VT25-28ZERK |
| 9 | HEX CAP | 1 | X355 |
| 10 | KF BEND/BELL | 1 | X805 |
| 11 | 1/4" HEX PLUG | 1 | VFHP2M |
| 12 | HANDWHEEL ASY | 1 | X815 |
| 13 | ROTATION LOCK PIVOT | 1 | X180 |
| 14 | ROTATION LOCK INSERT | 1 | X170 |
| 15 | ROTATION LOCK SPRING | 1 | X160 |
| 16 | ROTATION LOCK LEVER | 1 | Z152 |
| 17 | WEAR STRIP | 1 | X120 |
| 18 | CUP SEAL | 1 | X125 |

| # | DESCRIPTION | QTY | PART # |
|----|-------------------|-----|--|
| 19 | 5/16" BALL 302 SS | 152 | VB.312 |
| 20 | 3/8-24 X 3/8.SET | 4 | VT37-24SS375 |
| 21 | BASE | 1 | X410-3ASA X411PL (3NPT) X414-4ASA |
| 22 | PIN RETAINER | 1 | X137 |
| 23 | ELBOW ASSY | 1 | X820* |
| 24 | O-RING-241 | 1 | VO-241 |
| 25 | DRAIN HOUSING | 1 | X375 |
| 26 | DRAIN VALVE | 1 | X382 |
| 27 | 1/4" SS WASHER | 1 | VW687X281-50 |
| 28 | 1/4-28 X 1/2 BHCS | 1 | VT25-28BH500 |
| 29 | 3/8-16 X 5/8 SHCS | 2 | VT37-16SH625 |
| 30 | HANDLE | 1 | X363 |
| 31 | O-RING-130 | 1 | VO-130 |


9.2 HURRICANE XFIE EXTENDED SERIES

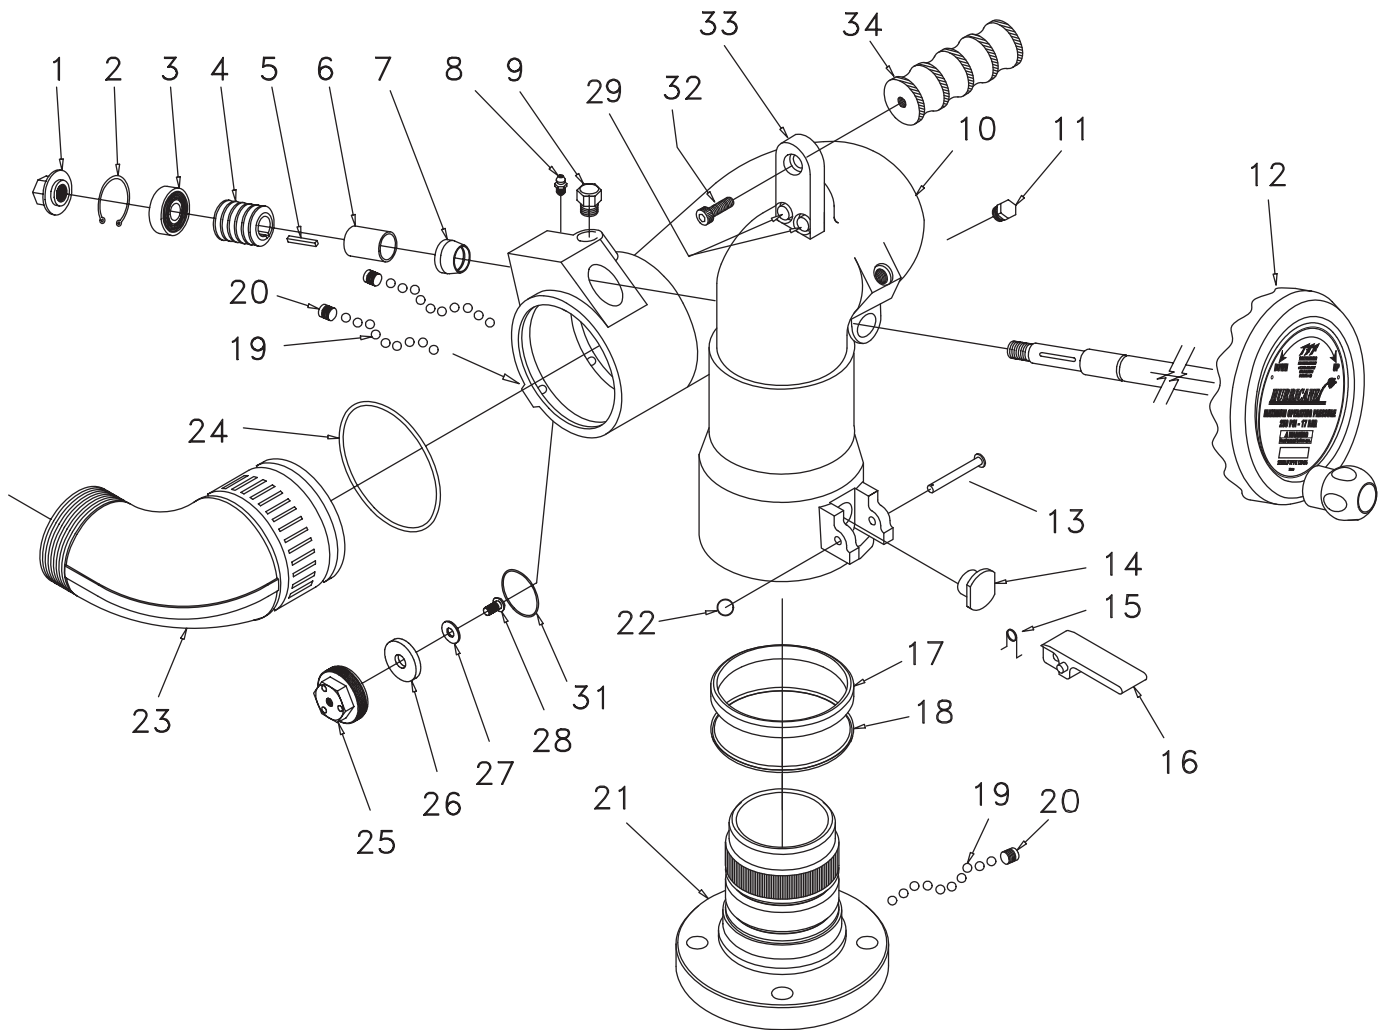

| # | DESCRIPTION | QTY | PART # |
|----|----------------------|-----|-------------|
| 1 | Shaft Nut | 1 | X210 |
| 2 | SNAP RING | 1 | VR4220 |
| 3 | SKF6202-2RS BRNG | 1 | VM4250 |
| 4 | WORM | 1 | X220 |
| 5 | KEY 1/8" X 1.00" | 1 | X225 |
| 6 | BUSHING | 1 | X230 |
| 7 | BOOT | 1 | X240 |
| 8 | 1/4-28 GREASE ZERK | 2 | VT25-28ZERK |
| 9 | HEX CAP | 1 | X355 |
| 10 | KF BEND/BELL | 1 | X805-E |
| 11 | 1/4" HEX PLUG | 1 | VFHP2M |
| 12 | HANDWHEEL ASY | 1 | X815 |
| 13 | ROTATION LOCK PIVOT | 1 | X180 |
| 14 | ROTATION LOCK INSERT | 1 | X170 |
| 15 | ROTATION LOCK SPRING | 1 | X160 |
| 16 | ROTATION LOCK LEVER | 1 | Z152 |
| 17 | WEAR STRIP | 1 | X120 |
| 18 | CUP SEAL | 1 | X125 |


| # | DESCRIPTION | QTY | PART # |
|----|-------------------|-----|--|
| 19 | 5/16" BALL 302 SS | 152 | VB.312 |
| 20 | 3/8-24 X 3/8.SET | 4 | VT37-24SS375 |
| 21 | BASE | 1 | X410-3ASA X411PL (3NPT) X414-4ASA |
| 22 | PIN RETAINER | 1 | X137 |
| 23 | ELBOW ASSY | 1 | X820* |
| 24 | O-RING-241 | 1 | VO-241 |
| 25 | DRAIN HOUSING | 1 | X375 |
| 26 | DRAIN VALVE | 1 | X382 |
| 27 | 1/4" SS WASHER | 1 | VW687X281-50 |
| 28 | 1/4-28 X 1/2 BHCS | 1 | VT25-28BH500 |
| 29 | 3/8-16 X 5/8 SHCS | 2 | VT37-16SH625 |
| 30 | HANDLE | 1 | X363 |
| 31 | O-RING-130 | 1 | VO-130 |
| 32 | 3/8-16 X 5/8 SCHS | 1 | VT37-16SH625 |
| 33 | TOMBSTONE | 1 | X365 |
| 34 | PEG | 1 | X362 |

9.3 HURRICANE RC MONITOR ASSEMBLY

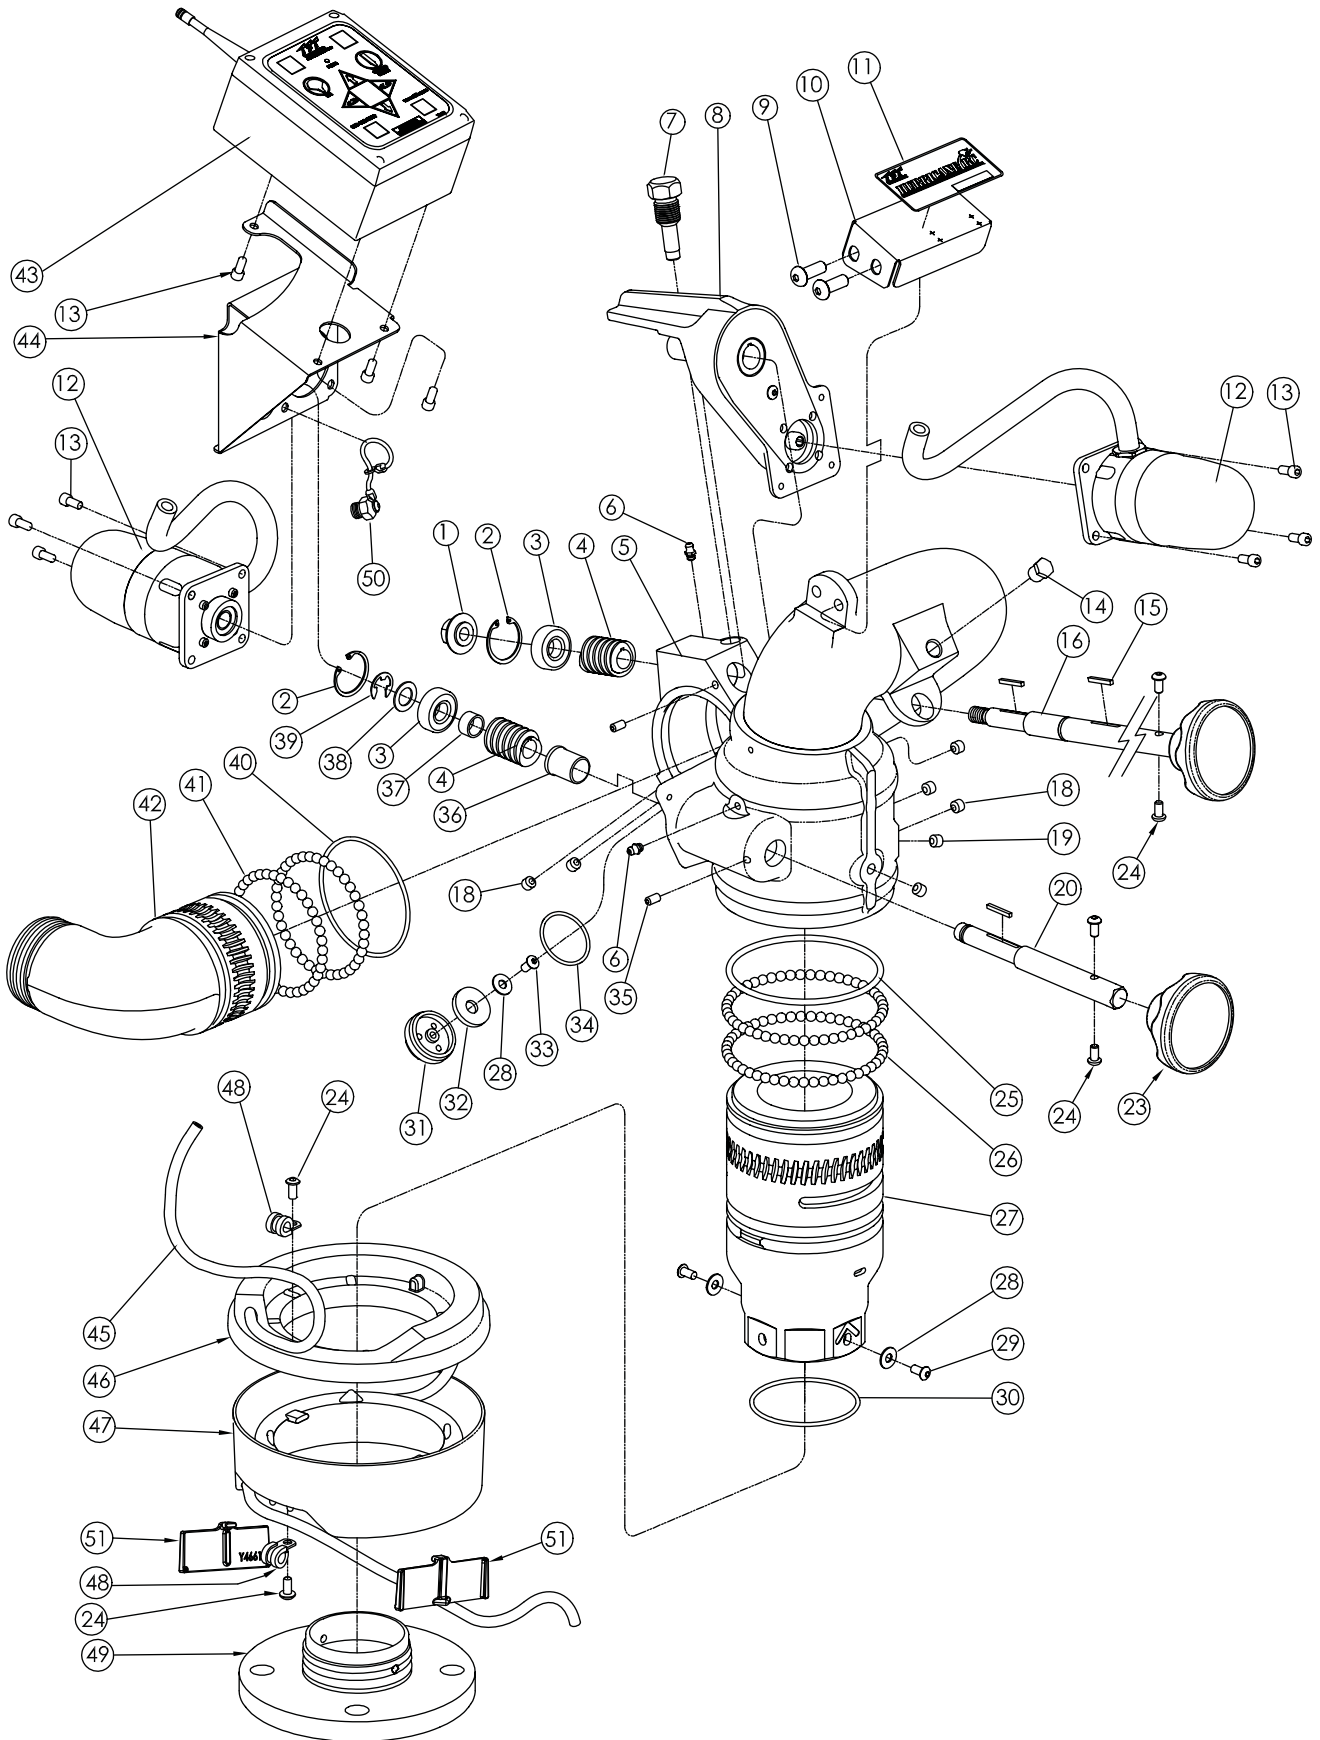


| # | DESCRIPTION | QTY | PART # |
|----|----------------------------|---------|--------------|
| 1 | SHAFT NUT | 1 | X210 |
| 2 | SNAP RING | 2 | VR4220 |
| 3 | BEARING | 2 | VM4250 |
| 4 | WORM W/ KEYWAY | 2 | X220 |
| 5 | BELL / BIG BEND ASSEMBLY | 1 | X806 |
| 6 | GREASE FITTING 1/4-28 | 2 | VT25-28ZERK |
| 7 | HEX MOUNTING SCREW | 1 | X258 |
| 8 | CHAIN DRIVE ASSEMBLY | 1 | X888 |
| 9 | 3/8-16 x 1 BHCS | 2 | VT37-16BH1.0 |
| 10 | LABEL BRACKET | 1 | X395 |
| 11 | LABEL: HURRICANE RC | 1 | XL300 |
| 12 | GEAR MOTOR ASSEMBLY | 2 | Y4950 |
| 13 | 1/4-28 x 1/2 SHCS | 9 | VT25-28SH500 |
| 14 | 1/4"NPT HEX HEAD PLUG | 1 | VFHP2M |
| 15 | KEY 1/8 x 1.00 | 3 | X225 |
| 16 | ELEV. SHAFT | 1 | X272 |
| 17 | LABEL; DOWN <-> UP | 1 | Y4175 |
| 18 | 3/8-24 x 5/16 SHCS CUP PT. | 4 | VT37-24SS312 |
| 19 | 3/8-24 x 3/8 SHCS CUP PT | 5 | VT37-24SS375 |
| 20 | DRIVE SHAFT | 1 | Y4160 |
| 21 | DOME PLUG | 2 | VM4123 |
| 22 | LABEL; LEFT <-> RIGHT | 1 | XL108 |
| 23 | KNOB | 2 | Z245 |
| 24 | 1/4-20 x 1/2 BHCS | 6 | VT25-20BH500 |
| 25 | O-RING-350 | 1 | VO-350 |
| 26 | BALL 5/16 TORLON (49) | 98 | VB.312TO |
| 27 | BASE CODE-RLF 3" ALUM | 1 | Y4405A |
| 28 | FLAT WASHER 1/4" | 3 | VW687X281-50 |
| 29 | 1/4-28 x 1/2 BHCS | 2 | VT25Y28BH504 |
| 30 | O-RING-236 | 1 | VO-236 |
| 31 | DRAIN HOUSING | 1 | X375 |
| 32 | DRAIN VALVE | 1 | X382 |
| 33 | 1/4-20 x 1/2 BHCS | 1 | VT25-20BH500 |
| 34 | O-RING-130 | 1 | VO-130 |
| 35 | 1/4-28 x 3/8 SHCS CUP PT. | 2 | VT25-28SS375 |
| 36 | HEADED BUSHING | 1 | Y4141 |
| 37 | SPACER | 1 | Y4150 |
| 38 | SPACER WASHER | 1 | VW97X595-048 |
| 39 | E-CLIP 5/8" EXT. | 1 | VR4295 |
| 40 | O-RING-241 | 1 | VO-241 |
| 41 | BALL 5/16" TORLON (38) | 76 | VB.312TO |
| 42 | ELBOW 2.5"NH ALUM SILVER | 1 | X820NJ-SIL |
| 43 | CONTROL BOX - ASMBLY | 1 | Y5800 |
| 44 | BOX BRACKET | 1 | X390 |
| 45 | CABLE - POWER & COMM. | 34 FEET | Y5200 |
| 46 | UPPER WIRE SKIRT | 1 | Y4650 |
| 47 | LOWER WIRE SKIRT | 1 | Y4660 |
| 48 | LOOP CLAMP 3/8" | 2 | Y4655 |
| 49 | FLANGE 3"ANSI 150 ALUM | 1 | Y4410A |
| 51 | WIRE SKIRT RETAINER | 2 | Y4661 |

9.4 ELEVATION CHAIN DRIVE ASSEMBLY

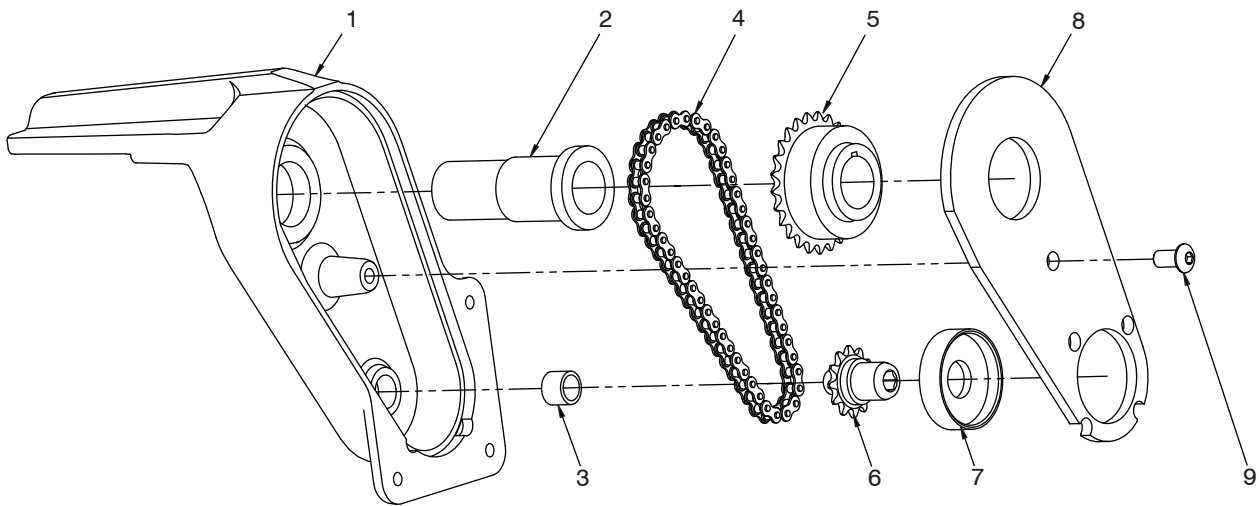


| # | DESCRIPTION | QTY | PART # |
|---|-------------------|-----|--------------|
| 1 | HOUSING | 1 | X250 |
| 2 | BUSHING - SHAFT | 1 | X251 |
| 3 | BUSHING - DRIVE | 1 | X252 |
| 4 | ROLLER CHAIN RING | 1 | X255 |
| 5 | SPROCKET - SLAVE | 1 | X254 |
| 6 | SPROCKET - DRIVE | 1 | X253 |
| 7 | BUSHING - MOTOR | 1 | X256 |
| 8 | COVER | 1 | X257 |
| 9 | 1/4-28 x 1/2 BHCS | 1 | VT25-28BH500 |

9.5 GEAR MOTOR ASSEMBLY

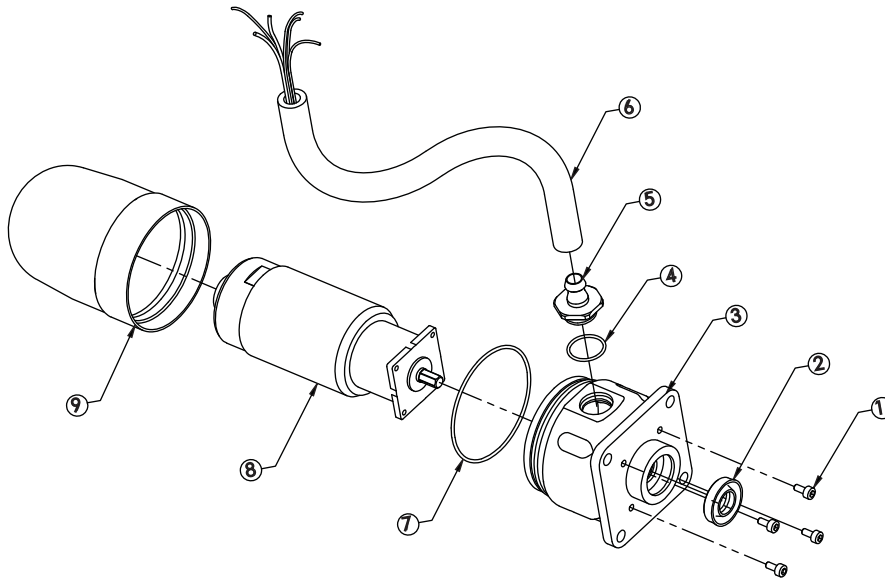

| # | DESCRIPTION | QTY | PART # |
|---|--------------------------------------|-----|--------------|
| 1 | 6-32 x 5/16 LONG SHCS WITH HEAD SEAL | 4 | VT06S32SH312 |
| 2 | CUP SEAL 1.0625 x .5625 x 1/4 | 1 | Y4620 |
| 3 | MOTOR SOCKET | 1 | Y4615 |
| 4 | O-RING-018 | 1 | VO-018 |
| 5 | CONDUIT FITTING | 1 | Y5213 |
| 6 | HOSE - 3/8" ID PUSH-LOK | 1 | Y5250 |
| 7 | O-RING-038 | 1 | VO-038 |
| 8 | GEAR MOTOR WITH ENCODER | 1 | Y4611 |
| 9 | ENCLOSURE | 1 | Y4616 |

9.6 MONITOR CONTROL BOX ASSEMBLY

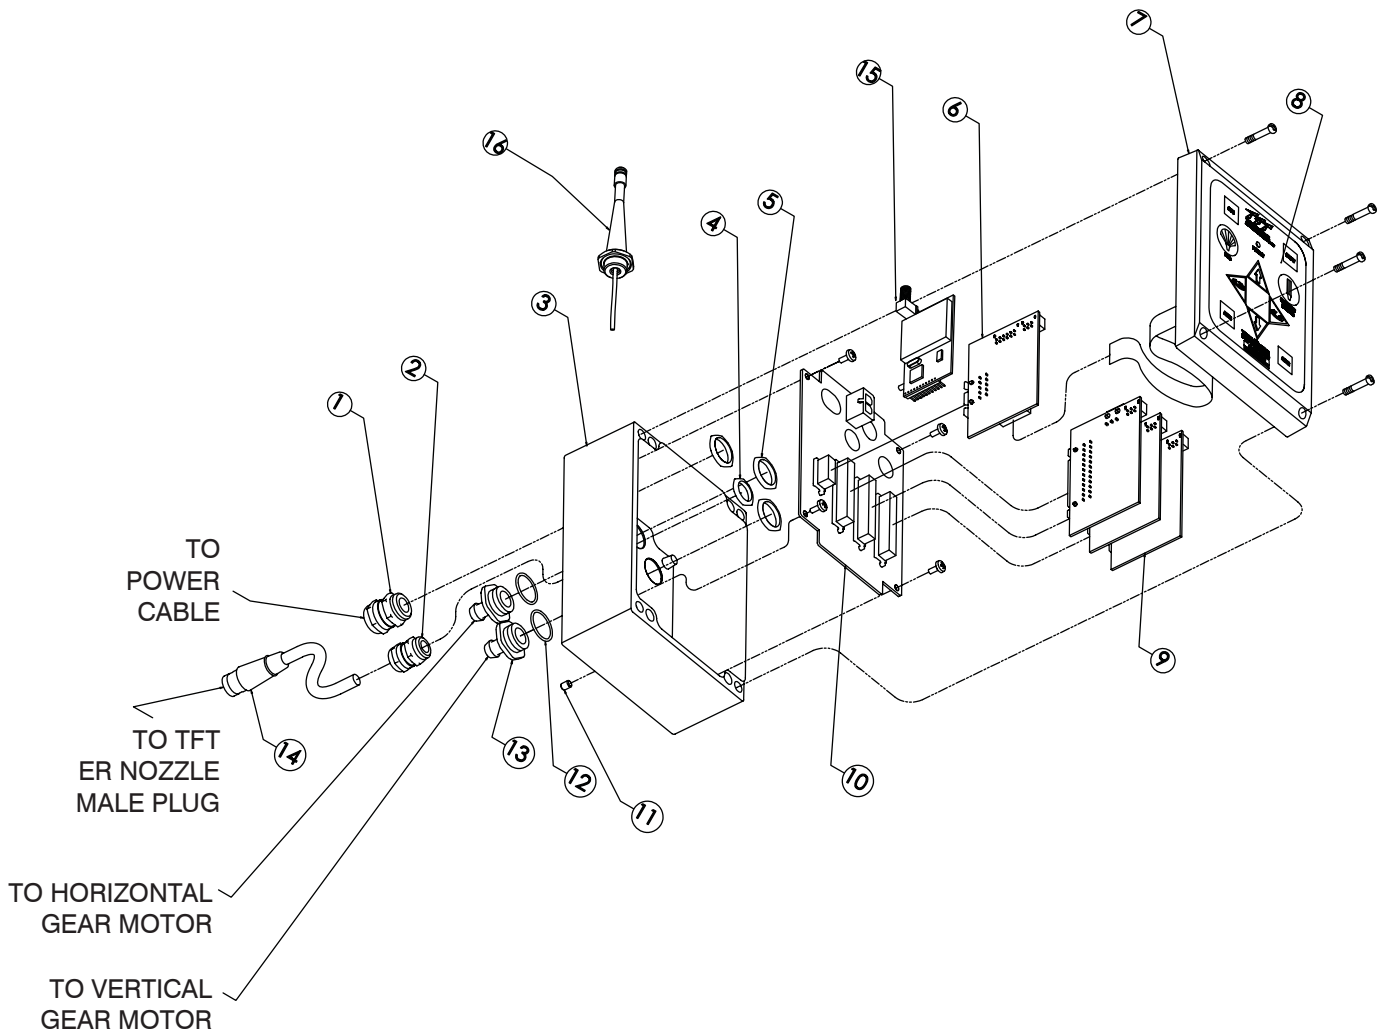

| # | DESCRIPTION | QTY | PART # |
|----|---|--|--------------|
| 1 | CABLE FITTING PG11 | 1 | Y5205 |
| 2 | CABLE FITTING PG9 | 1 | Y5245 |
| 3 | ENCLOSURE - BOX | 1 | Y5115 |
| 4 | LOCKNUT - PG9 | 1 | Y5246 |
| 5 | LOCKNUT - PG11 | 3 | Y5206 |
| 6 | BOARD - COMMUNICATION | 1 | Y5110-B |
| 7 | ENCLOSURE - LID | 1 | Y5115 |
| 8 | CONTROL SWITCH PAD | 1 | Y5700 |
| 9 | BOARD - MOTOR CONTROL | 3 | Y5100 |
| 10 | BOARD - MAIN | 1 | Y5105 |
| 11 | V10-32 x 1/4 SET SCREW | 1 | VT10Y32SS250 |
| 12 | O-RING-018 | 2 | VO-018 |
| 13 | CONDUIT HOSE FITTING | 2 | Y5213 |
| 14 | FEMALE PLUG - 6 POLE FOR TORNADO RC NOZZLE CONNECTION | 10.0" TOTAL LENGTH USED 5.0" EXPOSED CABLE (not including plug) | Y5475 |
| 15 | BOARD-OEM 900 MHZ RF MODULE (included with part YE-RF-900) | 1 | Y5710 |
| 16 | ANTENNA W/FITTING | 1 | Y5881 |

10.0 WARRANTY

Task Force Tips, Inc., Valparaiso, Indiana 46383-6940 ("TFT") warrants to the original purchaser of its Hurricane and Hurricane RC Monitor ("equipment"), and to anyone to whom it is transferred, that the equipment shall be free from defects in material and workmanship during the five (5) year period from the date of purchase.

TFT's obligation under this warranty is specifically limited to replacing or repairing the equipment (or its parts) which are shown by TFT's examination to be in a defective condition attributable to TFT. To qualify for this limited warranty, the claimant must return the equipment to TFT, at 2800 East Evans Avenue, Valparaiso, Indiana 46383-6940, within a reasonable time after discovery of the defect. TFT will examine the equipment. If TFT determines that there is a defect attributable to it, it will correct the problem within a reasonable time. If the equipment is covered by this limited warranty, TFT will assume the expenses of repair.

If any defect attributable to TFT under this limited warranty cannot be reasonably cured by repair or replacement, TFT may elect to refund the purchase price of the equipment, less reasonable depreciation, in complete discharge of its obligations under this limited warranty. If TFT makes this election, claimant shall return the equipment to TFT free and clear of any liens and encumbrances.

This is a limited warranty. The original purchaser of the equipment, any person to whom it is transferred, and any person who is an intended or unintended beneficiary of the equipment, shall not be entitled to recover from TFT any consequential or incidental damages for injury to person and/or property resulting from any defective equipment manufactured or assembled by TFT. It is agreed and understood that the price stated for the equipment is in part consideration for limiting TFT's liability. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

TFT shall have no obligation under this limited warranty if the equipment is, or has been, misused or neglected (including failure to provide reasonable maintenance) or if there have been accidents to the equipment or if it has been repaired or altered by someone else.

THIS IS A LIMITED EXPRESS WARRANTY ONLY. TFT EXPRESSLY DISCLAIMS WITH RESPECT TO THE EQUIPMENT ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND ALL IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE. THERE IS NO WARRANTY OF ANY NATURE MADE BY TFT BEYOND THAT STATED IN THE DOCUMENT.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.