

## Add a Jet Siphon to a Low Level Strainer

1.1 Remove retainer ring from plug and push plug through hole. Remove by reaching through the coupling end of the product.



1.2 Apply a layer of grease (VSA-104) to the o-ring grooves in the Adapter, install O-rings and apply a layer of grease over it.



1.3 Insert the Tube assembly into the jet siphon port on the Strainer Body.

1.4 Apply a layer of grease to the o-ring groove on the end of the jet siphon port. Install the O-ring and apply grease over it. **DO NOT GET GREASE IN THE BALL GROOVE.**




(continued on back)

1.5 Push the elbow over the end of the siphon tube. Install all 34 balls in the ball groove by dropping through the small threaded hole in the side of the elbow. Plug the small hole by threading in a setscrew until flush. Apply red loctite to the threads on the set screw before installing.



1.6 Install the Blind Plug on the loop end of the Lanyard. Install the Circle Cotter on the opposite end of the lanyard and install on the Body.

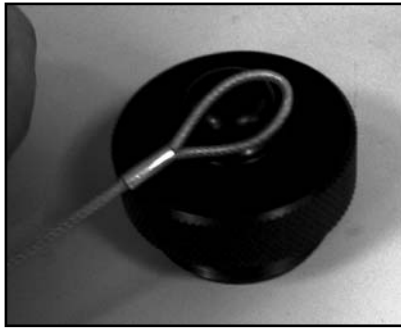

1.7 Install the Blind Plug on the Coupling hand tight.

