



# TORNADO CONTROL BOX SUPPORT UPGRADE KIT Y2132-KIT

## NOTICE

Keep track of ALL removed hardware. It will be reused.

Tools Needed:

3/16" Hex Key

5/16" Hex Key


In this kit (colored for instruction only):



Read Prior To Upgrading Tornado Control Housing Brackets.




STEP 1 - Remove 1X Stop Bolt Or Set Screw(s)

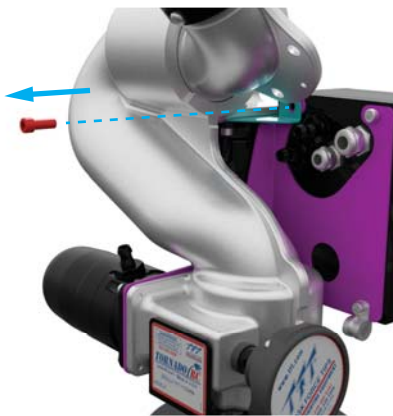


STEP 2 - Remove 1X Socket Head Screw(s)



STEP 3 - Remove 3X Socket Head Screw(s), Vertical Motor Housing, Y2131 Bracket

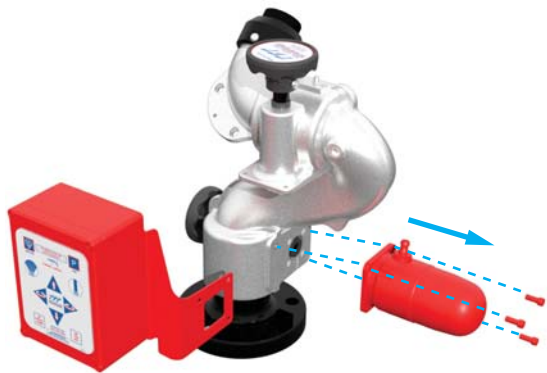

STEP 4 - Remove 3X Socket Head Screw(s), Horizontal Motor Housing Y2130 Bracket

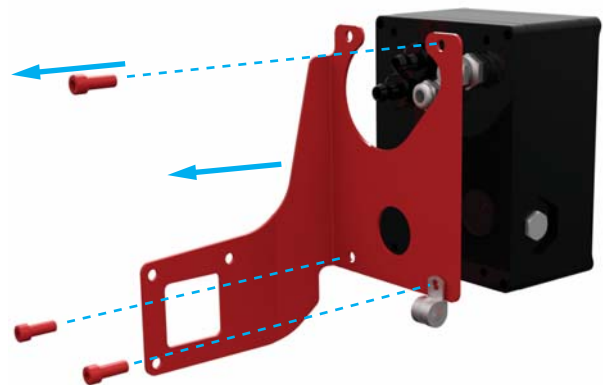


STEP 5 - Remove 3X Socket Head Screw(s). Y2130 Bracket

**TASK FORCE TIPS, INC.**  
MADE IN USA • [www.tft.com](http://www.tft.com)


3701 Innovation Way, Valparaiso, IN 46383-9327 USA  
800-348-2686 • 219-462-6161 • Fax 219-464-7155

## NOTICE


Apply blue loctite to threads before tightening all fittings.

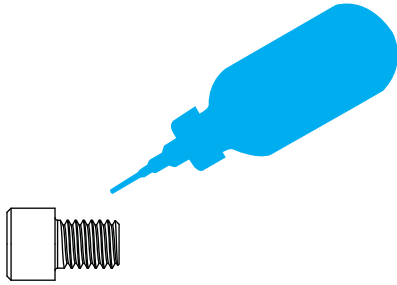

READ PRIOR TO REASSEMBLY.

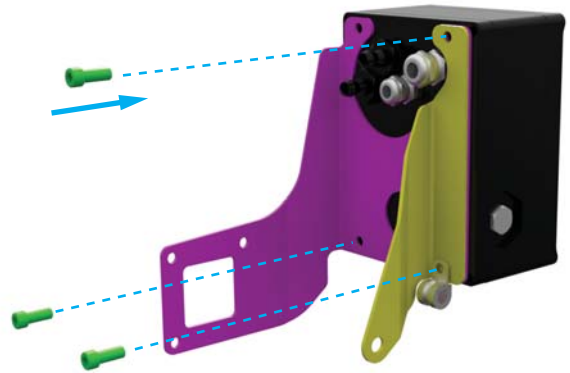

STEP 6 - Align Y2130 & Y2132 Bracket.  
Tighten 3X Socket Head Screw(s)

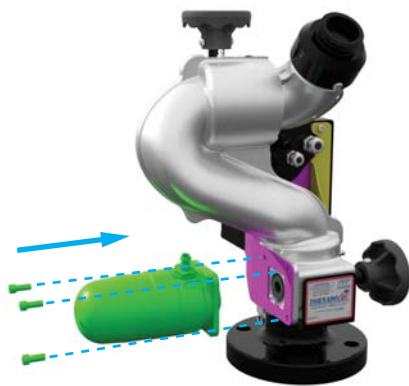

STEP 7 - Align Horizontal Motor Housing & Y2130 Bracket.  
Leave the motor mounting screws slightly loose until all items have been installed then tighten all screws.  
Tighten 3X Socket Head Screw(s)



STEP 8 - Align Vertical Motor Housing & Y2131 Bracket.  
Leave the motor mounting screws slightly loose until all items have been installed then tighten all screws.  
Tighten 3X Socket Head Screw(s)



STEP 9 - Lift Control Box And Tighten 1X Stop Bolt Or 1X Socket Head Screw(s). If a set screw was originally installed in this location it will be replaced by the 3/8" socket head screw included in the kit.



STEP 10 - Align Y2130 & Y2131 Bracket.  
Tighten 1X Socket Head Screw(s) With 1X Washer.

**TASK FORCE TIPS, INC.**  
MADE IN USA • [www.tft.com](http://www.tft.com)

3701 Innovation Way, Valparaiso, IN 46383-9327 USA  
800-348-2686 • 219-462-6161 • Fax 219-464-7155