



# Aluminum Storz Lock Lever Installation

A4178-KIT 4" - A4179-KIT 5" - A4276-KIT 6"

**CAUTION** Eye protection required. Using inadequate protective equipment may result in minor or moderate injury. Use additional personal protective equipment as directed by local requirements.

### Tools Needed


Large flat screwdriver  
THA403 storz tool (included)



 **Watch Full  
Installation Video**



STEP 1 - Use a large flat screwdriver to push the lever off its post while maintaining the lever in the down position

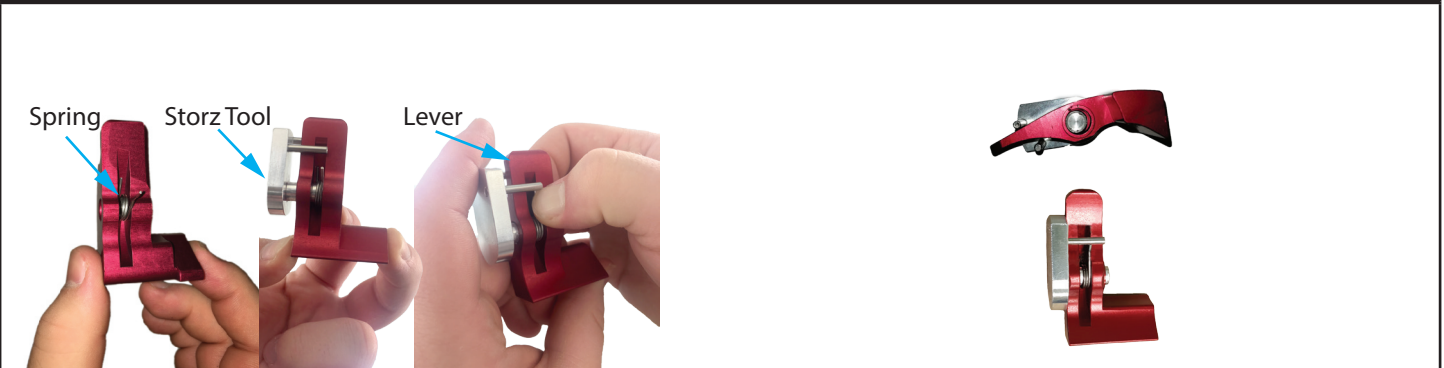

STEP 2 - Insert spring into either the: 4", 5", or 6" aluminum lever with the small ear of the spring facing forward flat against the surface. Line up spring and lever holes before inserting THA403 tool partially. Fold large ear in and fully seat lever against tool insuring the long ear is captured under the dowel pins of the tool.



STEP 3 - Align the storz tool with the cylindrical post on the storz coupling. While holding the coupling use both thumbs to press lever until it is fully seated. Operate the lock several times to insure free movement.

**TASK FORCE TIPS LLC**  
MADE IN USA • [tft.com](http://tft.com)

3701 Innovation Way, Valparaiso, IN 46383-9327 USA  
800-348-2686 • 219-462-6161 • Fax 219-464-7155